



Tech Info Library

Manzanita software: Printer Switch Settings

Revised: 3/10/86
Security: Everyone

Manzanita software: Printer Switch Settings

=====

The Business Accountant, The Advanced Business Accountant, and BusinessWorks require 10 characters per inch to properly align on preprinted forms.

Imagewriter:

| | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | |
|-----------|-------|---|---|---|---|---|---|---|--------|
| Switch 1: | ----- | | | | | | | | |
| | | | | X | | | | | Closed |
| | X | X | X | | X | X | X | X | Open |
| | ----- | | | | | | | | |

| | 4 | 3 | 2 | 1 | |
|-----------|-------|---|---|---|--------|
| Switch 2: | ----- | | | | |
| | | | X | X | Closed |
| | X | X | | | Open |
| | ----- | | | | |

Refer to page 40 and 41 of the Imagewriter Manual.

Imagewriter II:

Switch settings same as for Imagewriter. Be sure the perforation skip switch is off.

Interface Cards:

Grapler Plus: Must be version 3.2. To test for version, boot computer and enter PR#1 (be sure the printer is on and on-line). With the caps lock key on, enter Control-I V. The version of the card will print to the printer. Enter Control-I 80N for special character string in "Change Line Printer Configuration" option of System Setup and Configuration Menu.

NOTE: Apple Computer Inc. is not responsible for the contents of this article.

Manzanita Software Systems, Customer Support (916) 781-3880

