

Color StyleWriter 4500

Color ink-jet printer for Mac OS users

For more information, see onscreen help

 Apple Computer, Inc.

© 1997 Apple Computer, Inc. All rights reserved.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Apple. Your rights to the software are governed by the accompanying software license agreement.

The Apple logo is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Use of the “keyboard” Apple logo (Option-Shift-K) for commercial purposes without the prior written consent of Apple may constitute trademark infringement and unfair competition in violation of federal and state laws.

Every effort has been made to ensure that the information in this manual is accurate. Apple is not responsible for printing or clerical errors.

Apple Computer, Inc.
1 Infinite Loop
Cupertino, CA 95014-2084
408-996-1010
<http://www.apple.com>
<http://imaging.apple.com>

Apple, the Apple logo, AppleShare, AppleTalk, AppleVision, Chicago, ColorSync, LaserWriter, LocalTalk, Mac, Macintosh, Macintosh Quadra, New York, PowerBook, Power Macintosh, StyleWriter, and TrueType are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

Extensions Manager, Finder, Geneva, Monaco, OneScanner, and QuickDraw are trademarks of Apple Computer, Inc.

Adobe, Acrobat, Adobe Illustrator, Adobe Type Manager, Photoshop, and PostScript are trademarks of Adobe Systems Incorporated or its subsidiaries and may be registered in certain jurisdictions.

Classic is a registered trademark licensed to Apple Computer, Inc.

Helvetica, Palatino, and Times are registered trademarks of Linotype-Hell AG and/or its subsidiaries.

ITC Avant Garde, ITC Bookman, ITC Garamond, ITC Lubalin Graph, ITC Machine, ITC Zapf Chancery, and ITC Zapf Dingbats are registered trademarks of International Typeface Corporation.

The Color StyleWriter 4000 Series printer drivers and Color SytelWriter 4000 Series PrintMonitor were developed using the Palomar Imaging Kernel licensed from Palomar Software, Inc.

Other products and company names mentioned herein may be trademarks of their respective companies. Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. Apple assumes no responsibility with regard to the performance or use of these products.

Simultaneously published in the United States and Canada.



Contents



Communications regulation information vi

Welcome ix

1 Setting Up Your Printer 1

Important safety instructions 1

Unpacking the printer 3

Plugging in the printer 5

Connecting the printer directly to your computer 6

Connecting to a LocalTalk network (optional) 7

Turning the printer on and off 8

Power Macintosh users and virtual memory 8

Installing the ink cartridges 9

Installing your printer software 12

Telling your computer to use a directly connected
Color StyleWriter 4500 16

Telling your computer to use a Color StyleWriter
on a LocalTalk network 17

Loading paper into the paper tray 19

Aligning the ink cartridges 21

Printing the sample page 23

Using onscreen help with System 7.5 24

2 Printing 27

Planning documents with the Color StyleWriter 4500 in mind	27
Printing a document	28
Printing while you use your computer	31
Monitoring and controlling background printing	32
Adjusting color options	33
Printing a photograph	34
Printing a banner	38
Printing envelopes	42
Printing transparencies	47
Printing labels	49
Printing index cards and postcards	51
Two-sided printing	54
Printing a flipped document	56
Defining your own custom paper sizes	57

3 Tips on Paper, Quality, Speed, and Cost 59

Choosing print materials	59
Quality	63
Speed	64
Cost	64

4 Maintaining Your Printer 65

Replacing ink cartridges	65
Cleaning the outside of the printer	66

5 Troubleshooting	67
Safety precautions	68
The Chooser doesn't show the Color SW 4000 Series icon	68
Installation is unsuccessful	68
The computer crashes while attempting to print	70
The computer doesn't recognize the Color StyleWriter 4500	70
A PowerBook has trouble printing to the Color StyleWriter 4500	71
The lights indicate a problem	72
The printer seems slow	73
Paper is jammed	73
Paper or envelopes feed improperly	74
The Color StyleWriter 4500 won't print a particular document	75
The printer acts as if it's working, but nothing is printed on the page	75
Messages appear on your computer screen	76
Memory is low	76
Documents did not print as expected	77
Print quality is poor	79
Ink cartridges run out of ink too quickly	83
Appendix A Technical Information	85
Appendix B Using Fonts With the Color StyleWriter 4500	91
Appendix C Font List	105
Appendix D Using ColorSync	107
Index	115

Communications regulation information

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. See instructions if interference to radio or television reception is suspected.

Radio and television interference

The equipment described in this manual generates, uses, and can radiate radio-frequency energy. If it is not installed and used properly—that is, in strict accordance with Apple’s instructions—it may cause interference with radio and television reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your computer system is causing interference by turning it off. If the interference stops, it was probably caused by the computer or one of the peripheral devices.

If your computer system does cause interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the computer to one side or the other of the television or radio.
- Move the computer farther away from the television or radio.
- Plug the computer into an outlet that is on a different circuit from the television or radio. (That is, make certain the computer and the television or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary, consult an Apple-authorized service provider or Apple. See the service and support information that came with your Apple product. Or, consult an experienced radio/television technician for additional suggestions.

IMPORTANT Changes or modifications to this product not authorized by Apple Computer, Inc., could void the FCC Certification and negate your authority to operate the product.

Use of a shielded cable is required to comply within Class B limits of Part 15 of FCC Rules.



Industry Canada statement

This Class B device meets all requirements of the Canadian Interference-Causing equipment regulations.

Cet appareil numérique de la Class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

VCCI Class 2 statement

情報処理装置等電波障害自主規制について

この装置は、情報処理装置等電波障害自主規制協議会 (VCCI) の基準に基づく第二種情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをしてください。





Welcome



Congratulations on your purchase of the Apple Color StyleWriter 4500 printer. This book describes how to set up the printer and how to use it.

Main features of the Color StyleWriter 4500

- The Color StyleWriter 4500 prints high-quality color graphics and text on a variety of materials, including plain paper.
- Along with the printer, you have everything you need to print amazingly photorealistic images—right from your desktop. This is ideal for printing scanned images, images from photo CDs, and graphics from the Internet.
- The automatic sheet feeder holds up to 100 sheets of paper, up to 20 envelopes, and 20 sheets of continuous banner paper.
- You can connect the printer to a LocalTalk network or connect it directly to your computer with a serial cable.
- 64 available TrueType (outline) fonts print smoothly in a variety of sizes.
- The Color StyleWriter 4500 works with most Mac OS–based computers.

System requirements

To install the printer software and use the Color StyleWriter 4500 printer with your Mac OS–based computer, you need

- a Mac OS–based computer with a 68030/33 MHz or higher central processing unit (CPU), any Macintosh model except a Macintosh Plus, II, SE, IIsi, IIfx, Classic®, Portable, or PowerBook 100
- Macintosh Operating System (Mac OS) version 7.1 or a later version
- at least 4 megabytes (MB) of random-access memory (RAM) for a non-Power Macintosh; if you have a Power Macintosh, 8 MB of RAM is the minimum requirement, and 16 MB is recommended
- at least 8 MB of space available on your hard disk for the printer software

The Installer program that comes with the Color StyleWriter 4500 automatically checks whether your computer meets these requirements. Chapter 1 explains how to use the Installer program.



Setting Up Your Printer



This booklet introduces the Apple Color StyleWriter 4500 printer and explains how to set it up. After you follow the instructions in this booklet, you'll be ready to print.

Important safety instructions

Always take the following precautions:

- Keep the printer cover closed when printing.
- Always turn off the printer before unplugging it.
- Keep the ink cartridges away from children.
- Keep the printer away from sources of liquid, such as wash basins, bathtubs, and shower stalls.
- Protect the printer from dampness or wet weather, such as rain and snow.
- Read all the installation instructions carefully before you plug the printer into a wall socket.
- Keep these instructions handy for reference by you and others.
- Follow all instructions and warnings dealing with your computer system.
- Don't use devices that produce open flames, such as Bunsen burners, near the printer.

- Don't use alcohol-based or ammonia-based cleaners on or around the printer.
- Always unplug the printer before cleaning it. (Use only the cleaning procedure recommended in Chapter 4 of the electronic manual that came with your printer. For information on using the electronic manual, see the last page of this booklet.)
- Clean the outside of the printer with a damp cloth and, if necessary, a mild soap or detergent. Be careful not to get liquid into the printer or the power cord receptacle.

IMPORTANT The only way to disconnect power completely is to unplug the power adapter. Make sure at least one end of the power cord is within easy reach so that you can unplug the Color StyleWriter 4500 when you need to.


Watch for these situations, and if one occurs pull the plug!

- the power cord or plug becomes frayed or otherwise damaged
- you spill something into the printer
- the printer is exposed to rain or any other excess moisture
- the printer has been dropped or otherwise damaged
- you suspect that your printer needs service or repair

WARNING Electrical equipment may be hazardous if misused. Operation of this product, or similar products, must always be supervised by an adult. Do not allow children access to the interior of any electrical product and do not permit them to handle any cables.


Unpacking the printer

- 1 Remove everything from the shipping box, but leave the ink cartridges in their packages.

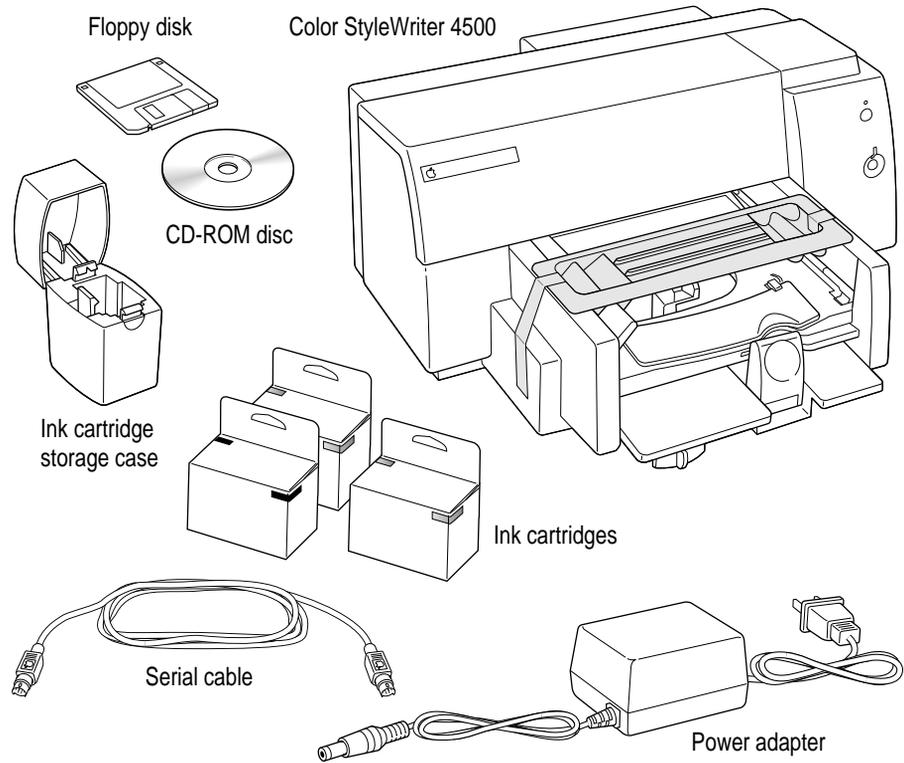

- 2 Remove the tape and packing material from the outside of the printer.

- 3 **Open the printer's cover and remove the packing material from the inside of the printer.**

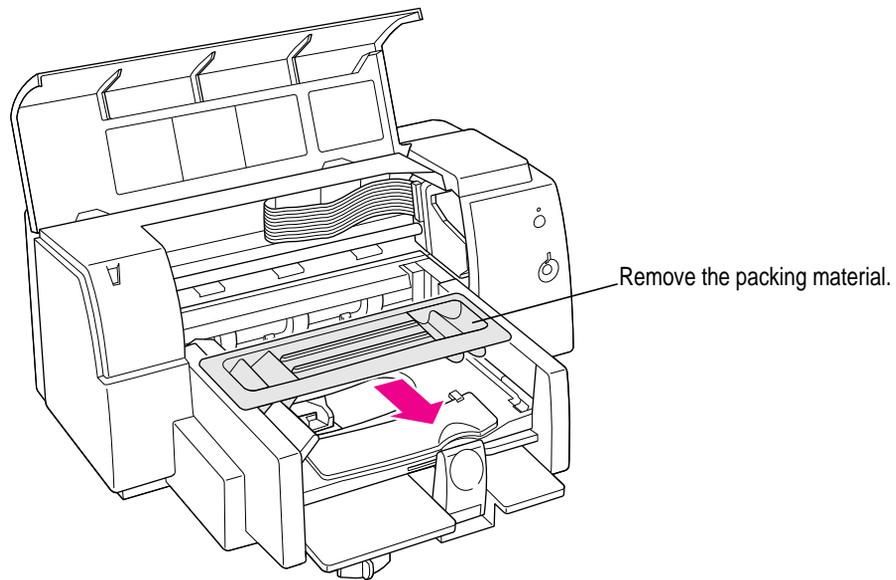

Save the carton and the packing material in case you ever need to ship the printer.

- 4 **Close the printer's cover.**


- 5 **Place the printer in your work area.**

Choose a location near your computer that has an electrical outlet and good ventilation, is out of direct sunlight, never gets damp or very hot or very cold, and is away from devices that could cause electromagnetic interference, such as stereo speakers or cordless telephone transmitters. Do not place the printer on a slanted surface. See Appendix A, “Technical Information,” for specific information about the physical requirements of your printer. (You’ll find Appendix A in the electronic manual that came with your printer. For information on using the electronic manual, see the last page of this booklet.)

IMPORTANT Don’t accidentally discard the ink cartridge storage case. You need it to store an opened cartridge that you’re not using in the printer. The case keeps the print head from drying out and prevents accidents with ink stains.

Plugging in the printer

Plug the connector end of the power adapter into the printer and then plug the other end of the adapter into an outlet.

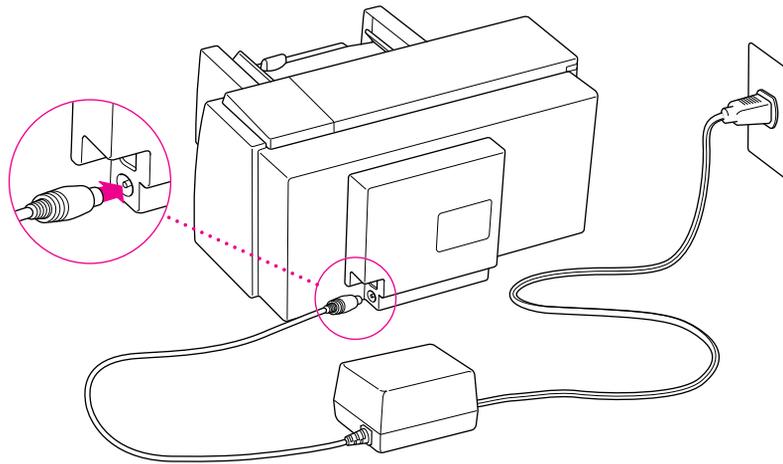

IMPORTANT The only way to disconnect power completely is to unplug the power adapter. Make sure that at least one end of the power cord is within easy reach so that you can unplug the printer in an emergency.

WARNING The Color StyleWriter 4500 is designed to work with the electrical system of the region in which you purchased it. It works with only one frequency of electricity, either 50 or 60 Hz. The label on the adapter you received with your printer indicates the frequency required.

The label on the adapter also indicates the voltage required. If you are using the printer in a region with a different voltage but the same frequency as that listed on the adapter, you must use a voltage converter to provide the voltage indicated on the adapter label.


Serious damage to the printer will result from using the Color StyleWriter 4500 adapter with an improper electrical frequency or improper voltage converter. Damage resulting from such misuse of the printer is not covered under warranty.

Connecting the printer directly to your computer

You can connect the printer directly to your computer with a serial cable. If you want to add the printer to a LocalTalk network, see the next section, “Connecting to a LocalTalk Network.” You cannot connect the printer both ways.

1 Plug the cable into the interface port on the printer.

You can use the serial cable that came with your printer, or you can use a LocalTalk kit and plug a LocalTalk cable into the same port.

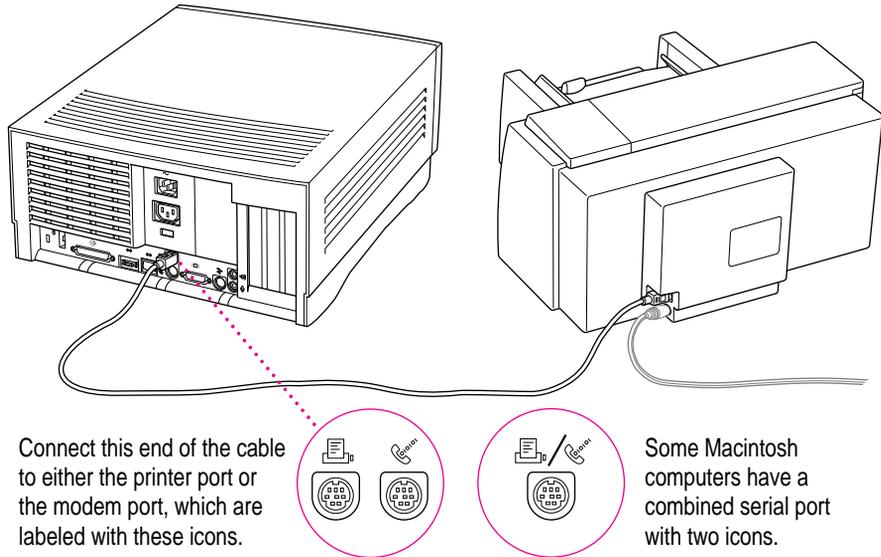

2 Plug the other end of the cable into the printer port on your computer.

If your computer is connected to a network, a network cable may already be connected to the printer port (🖨️). In that case, use the modem port (📞).

Remember which port on the computer you use. Later you must tell the printer software where to look for the printer.

Some PowerBook computers that have an internal modem installed cannot tell that the printer is plugged in. You must change a setting in the PowerBook Setup or Express Modem control panel. For details, see “Special Information for PowerBook Owners” in the section “Telling Your Computer to Use the Color StyleWriter 4500,” later in this chapter.

Connecting to a LocalTalk network (optional)

If you have an existing LocalTalk network, you can add your printer to it and share the printer with other Mac OS–based computers on the network.

IMPORTANT You can either connect the printer directly to your computer with a serial cable or connect it to a LocalTalk network with a LocalTalk connecting kit. You cannot connect the printer both ways at the same time.

1 Obtain a LocalTalk connecting kit.

LocalTalk connecting kits come in many varieties. A kit usually contains one connector box and one LocalTalk cable. Two LocalTalk connecting kits are available from Apple. For information about these kits, see “Apple Printer Supplies and Accessories” in Appendix A. (You’ll find Appendix A in the electronic manual that came with your printer. For information on using the electronic manual, see the last page of this booklet.)

2 Plug the connector box into the interface port on the printer.


3 Connect the printer to the network in one of these two ways:

- *To connect the printer to the end of a LocalTalk network*, use the LocalTalk cable to connect the empty socket of the nearest device’s connector box to the printer’s connector box.
- *To connect the printer between two devices on a LocalTalk network*, disconnect one LocalTalk cable from the connector box or the device immediately to the left or right of the printer and plug it into the new printer’s connector box. Then use the new LocalTalk cable to connect the free socket on the printer’s connector box to the socket you freed on the other device’s connector box.

Turning the printer on and off

To turn on the printer, press the power button. The green power light glows.

To turn the printer off, press the power button again. The power light goes out.

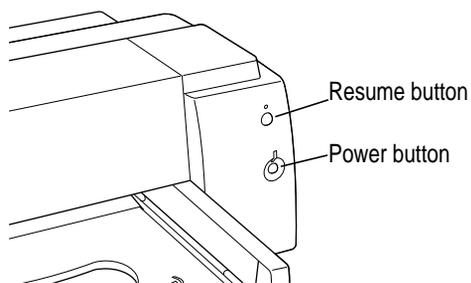

WARNING Except in an emergency, make sure the printer is turned off before you unplug it. (When the power light is off, the power is off.) If the printer is plugged into a power strip, never turn off the power strip unless you've already turned the printer off.

When you turn off the printer, it moves the ink cartridges to the right, where it caps the nozzles to keep the ink cartridges from drying out. If you unplug the printer or discontinue power before turning it off, the printer can't position the cartridges in the capped position, the print head may dry out, and you'll have to replace the cartridge.

Installing the ink cartridges

Each ink cartridge contains a print head, which sprays the ink onto the paper. Treat it gently so you don't damage its tiny nozzles.


WARNING The carrier holds the ink cartridges and moves them back and forth when you are printing a document. Don't slide the carrier by hand or you will damage the printer.

- 1 To turn on your printer, press the power button.

The power light comes on.

- 2 Open the front cover.

The carrier moves to the center of the printer, and the resume light flashes.

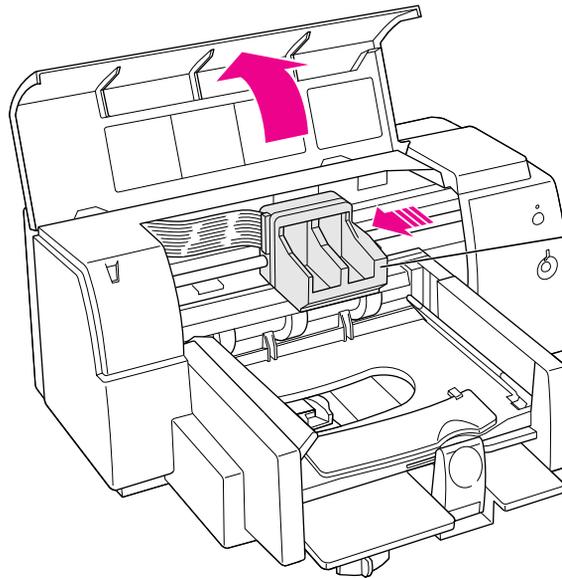

When you turn on the power and open the cover, the carrier moves to the center. Do not slide the carrier by hand.

Note: If the carrier does not move automatically to the center, try closing the cover and turning the power off. Then repeat steps 1 and 2.

WARNING Use only ink designed for use with the Color StyleWriter 4500.

- 3** Grasp each ink cartridge by its sides and carefully remove the tape from the cartridge's print head.


You may safely touch the colorful caps or the black plastic, but be careful not to touch any other part.




Note: Open the color and black ink cartridges. Set the color PhotoGrade cartridge aside, still in its protective packaging. Use it for special projects, not day-to-day printing.

- 4** Slide the ink cartridges down into the carrier, and then press both cartridges into place.


For the printer to work, you must install two ink cartridges.

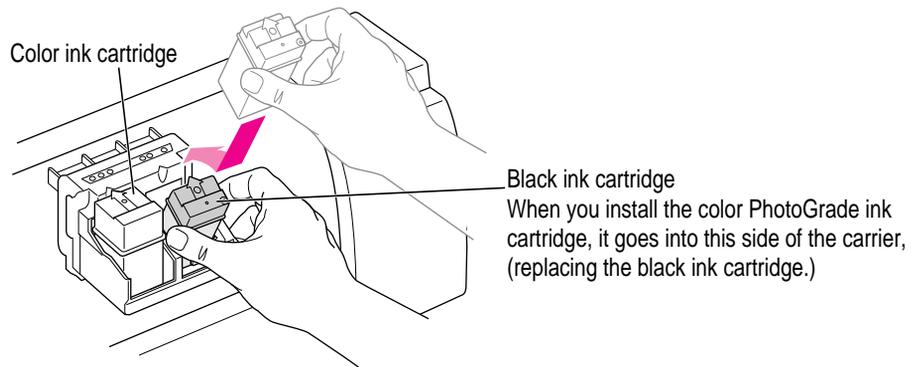

Press the cartridge all the way into the carrier.

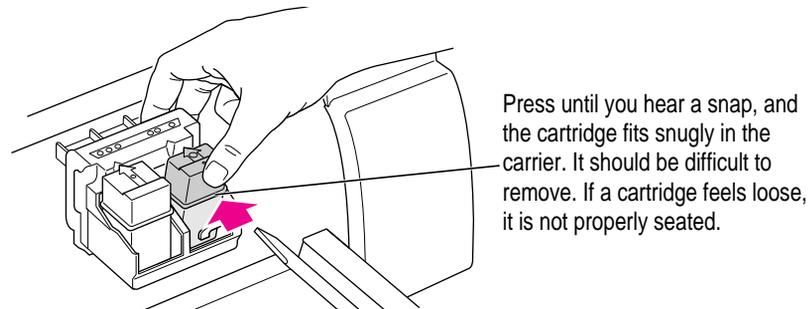

5 Close the printer's front cover.

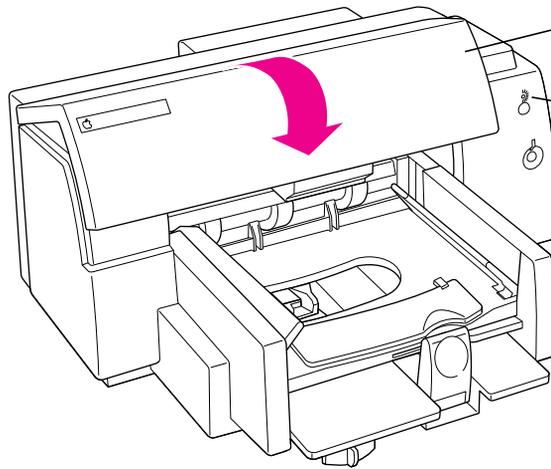


When you close the cover, you can hear the carrier move to the right.


IMPORTANT If the resume light blinks after you close the cover, the ink cartridges are not installed properly. Turn the printer off, then repeat steps 1 through 5. Be sure to press both ink cartridges firmly into place in the carrier.

Storing the ink cartridge you aren't using

The Color StyleWriter 4500 comes with color, black, and color PhotoGrade cartridges. Sealed in their original packaging, the cartridges are protected. If you open all three packages and switch between the black and PhotoGrade cartridges for printing different documents, be sure to store the one you're not using in the storage case supplied with your Color StyleWriter 4500. The storage case keeps the print head from drying out and prevents accidents with ink stains.

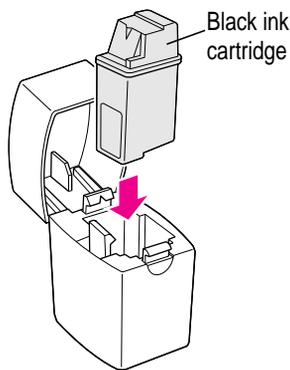

Black ink cartridge

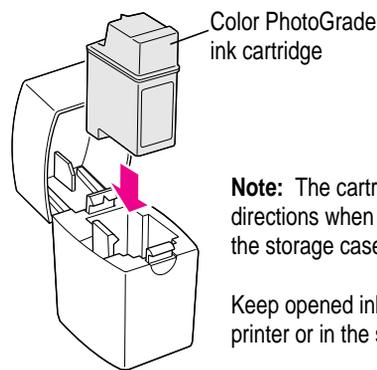

Color PhotoGrade ink cartridge

Note: The cartridges face in different directions when properly inserted in the storage case.

Keep opened ink cartridges inside the printer or in the storage case.

IMPORTANT If you are using only two cartridges, leave them inside the printer.

Installing your printer software

Before you can print your documents, you need to install the printer software on your computer. The *Apple Printer Software Collection* CD-ROM disc that comes with the Color StyleWriter 4500 contains the printer software and an Installer program.

The Installer installs the new printer software you need, plus the fonts that come with the printer. (For a list of available fonts, see Appendix C in the electronic manual that came with your printer. For information on using the electronic manual, see the last page of this booklet.)

If you have been using Apple's special QuickDraw GX software, turn it off now. The Color StyleWriter 4500 is not compatible with QuickDraw GX.

Note: If you ever upgrade your system software (for example, from System 7.1 to System 7.5), you must reinstall the Color StyleWriter 4500 software.

Using the *Minimal Printer Software* floppy disk

If you have a CD-ROM drive, skip to the next section, "Using the *Apple Printer Software Collection* CD-ROM Disc."

If you do not have a CD-ROM drive, the *Color StyleWriter 4000 Series Minimal Printer Software* floppy disk that came with your printer contains minimal software that lets you start printing now. For instructions on installing the software, see the Read Me you'll find on the floppy disk.

In addition, you can contact Apple and ask to have the complete Color StyleWriter 4500 printer software and fonts mailed to you on a set of floppy disks. You may also download the complete printer software (but not the fonts) from Apple's Web page at <http://imaging.apple.com>.

Note: Any software applications or extra fonts from companies other than Apple are available only on the CD-ROM disc.

If you have access to a computer with a CD-ROM drive, the *Apple Printer Software Collection* CD-ROM disc contains disk images of the complete set of floppy disks. The CD-ROM disc also contains a disk-duplication application you can use to create your own set of floppy disks. See the instructions that accompany the application

Note: The minimal printer software works with a Color StyleWriter 4500 printer that is connected by a serial cable to your computer. If you want to use a LocalTalk kit to connect the printer, you must use the software that comes on the *complete* disk set.

Now you can go to the section “Telling Your Computer to Use the Color StyleWriter 4500,” later in this booklet.

Using the *Apple Printer Software Collection* CD-ROM disc

- 1 Turn off any automatic virus-detection applications you have on your Mac OS–based computer.**

If you don't, problems may occur during the installation. After installation is complete, you can turn the virus-detection programs back on. (For instructions on turning off each virus-detection application, see the manual that came with the program.)

- 2 Insert the *Apple Printer Software Collection* CD-ROM disc into your CD-ROM drive.**

- 3 If necessary, double-click the CD-ROM disc icon to open it.**

The CD-ROM disc may already be opened on your desktop.

- 4 To start the Installer program, double-click its icon.**


- 5 In the Welcome dialog box that appears, click Continue.**

IMPORTANT The Installer determines whether you have the correct system software, and enough memory and hard disk space to use this printer. If you don't, the Installer displays a message telling you what you need. You won't be able to install the printer software until you correct the system software or memory problem. If the message reports a problem, you can purchase new system software or memory from an Apple-authorized dealer, or make space available on your hard disk by throwing away files you don't need.

- 6 Read the software license agreement and click Agree.**

If you are unwilling to accept the terms of the agreement, click Disagree.

7 In the Installer dialog box, click Install.

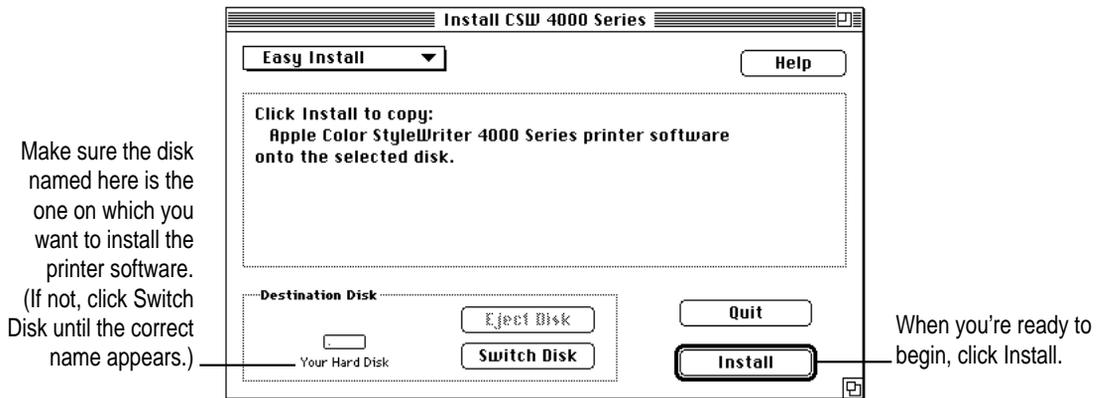

After a few moments, the Installer begins to install the printer software. A status box keeps you informed of progress during installation.

8 When you see a message reporting that installation was successful, click Restart.

Installation troubleshooting

If the Installer can't complete the installation, it will issue a warning message. Here are some ways to fix common problems:

- You may not have the correct hardware or system software for this printer. If so, the Installer will tell you what you're missing.
- You may have forgotten to turn off your virus-detection software as described in the section "Using the *Apple Printer Software Collection* CD-ROM Disc," earlier in this booklet.
- You may have some corrupted fonts on your hard disk. To solve this problem, see "Installation Is Unsuccessful" in Chapter 5. (You'll find Chapter 5 in the electronic manual that came with your printer. For information on using the electronic manual, see the last page of this booklet.)

More information about the Installer program

In the procedure just described the Installer copies all the software you need to your hard disk. In rare circumstances you may want to copy only a subset of the software. In that case choose Custom Install from the pop-up menu in the Installer. When a list of choices appears, select the items you wish to install, then click the Install button. (Click the letter *i* to the right of any of the choices for information.)

Power Macintosh users and virtual memory


If you are using a Power Macintosh computer, you may want to turn on virtual memory before you try to print on the Color StyleWriter 4500. Then choose a setting that's at least 1 MB higher than your "Available built-in memory." (You can set it higher without any ill effects.) With this setting, you will avoid some potential printing problems. Turning on virtual memory also reduces the amount of memory needed by many applications. For instructions on turning on virtual memory, see the documentation that came with your computer.

Telling your computer to use a directly connected Color StyleWriter 4500

If your printer is connected directly to your computer with a serial cable, follow these instructions for selecting it in the Chooser.

If your printer is connected to a LocalTalk network, see the next section, “Telling Your Computer to Use a Color StyleWriter on a LocalTalk Network.”

- 1 **Make sure the printer is turned on.**
- 2 **Select Chooser from the Apple () menu.**
- 3 **In the Chooser dialog box, click the appropriate items to select them.**

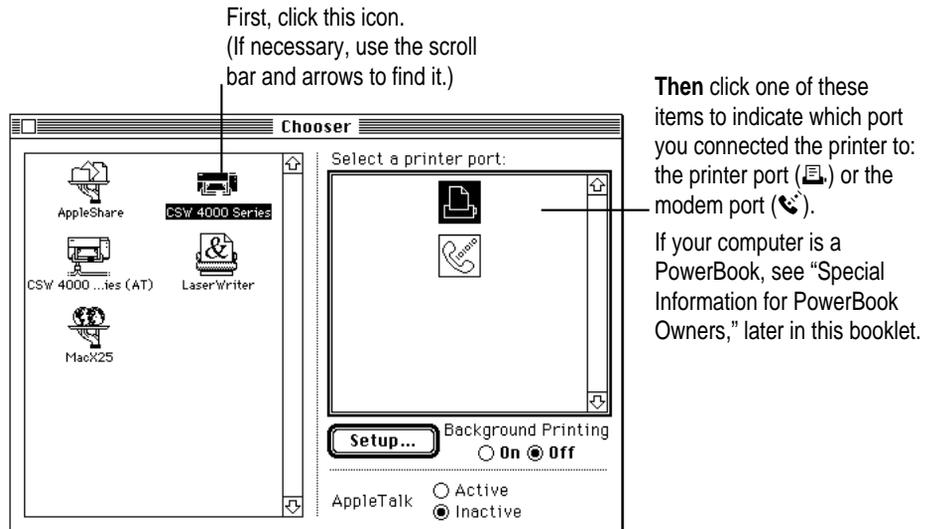


- 4 **Close the Chooser by clicking the close box in its upper-left corner.**

Telling your computer to use a Color StyleWriter on a LocalTalk network


You can connect a Color StyleWriter 4500 printer directly to a LocalTalk network.

Note: If you do not need to share the printer with other users on the network, connect the printer directly to your computer with the serial cable. The printer prints faster when connected this way.

Once the printer is on the network, its name appears in the Chooser just like the names of other network printers.

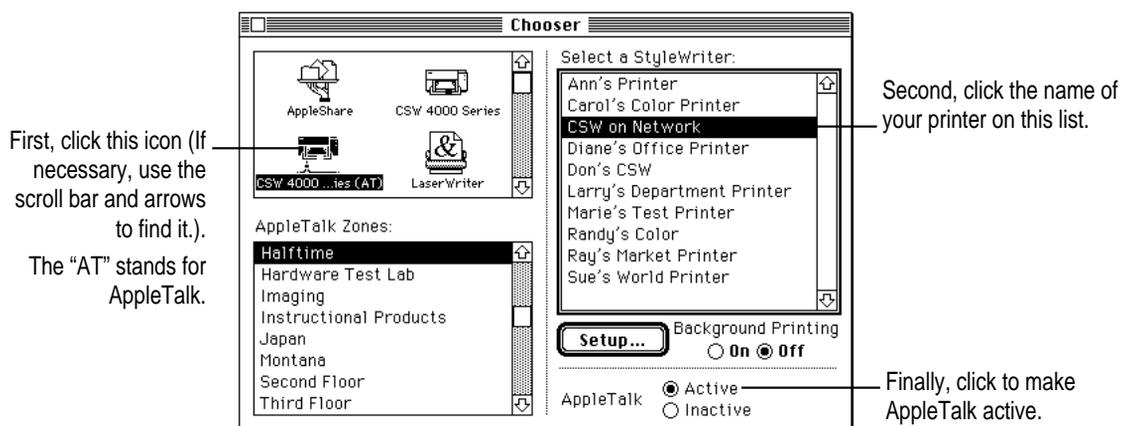

If you want to change the name, click Setup in the dialog box that appears, type a new name, and click Rename. (*Note:* Anyone on the network can change the name.)

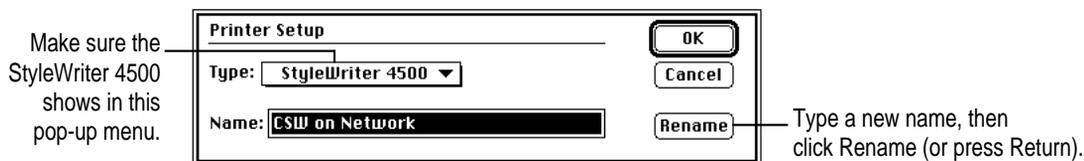

Special information for PowerBook owners

PowerBook computers that have internal modems may require special setups. What you do depends on whether the Powerbook has one or two serial ports on its back panel.

Note: This information is for PowerBook users who connect the printer directly to their computer with a serial cable.

PowerBook computers with one serial port

Some PowerBook computers have a single serial port identified by a combination printer/modem icon (🖨️/📡). If an internal modem is installed on one of these PowerBook computers, the serial port may be in use even though it looks available. When you plug in the Color StyleWriter 4500, the PowerBook may not be able to communicate with the printer.

To make the port available for printing, make sure the serial port setting is Normal or External. To check the setting, open the PowerBook, PowerBook Setup, or Express Modem control panel. (If you have another kind of internal modem, you may have a different control panel. The control panel and the setting you use depend on which PowerBook you have and which internal modem you have.) If you have a PowerBook Express Modem, it is best to leave the serial port setting as Normal or External unless the modem programs you use require another setting for compatibility reasons.

If icons for both ports appear in the Chooser, select the modem port (📡). Also, make sure AppleTalk is inactive.

PowerBook computers with two serial ports


Even when a PowerBook has two serial ports, if it also has an internal modem, the modem port (📡) may look available but actually be in use. If the printer port (🖨️) is available, connect the Color StyleWriter 4500 to it. If the printer port is unavailable and you must use the modem port, make sure the modem serial port setting is Normal or External. To check the setting, open the PowerBook, PowerBook Setup, or Express Modem control panel. (If you have another kind of internal modem, you may have a different control panel. The control panel and the setting you use depend on which modem and system software version you have.) If you have a PowerBook Express Modem, it is best to leave the serial port setting as Normal or External.

For more information, see the instructions that came with your PowerBook.

Loading paper into the paper tray

The paper tray holds up to 100 sheets of 20-pound paper and feeds the paper automatically into the printer. You can load many sizes of paper and other media into the sheet feeder, but to align the ink cartridges, as described in the next section, you must use U.S. Letter or A4 paper. To load paper into the sheet feeder, follow these steps:


- 1 Slide the paper adjusters out as far as you can.

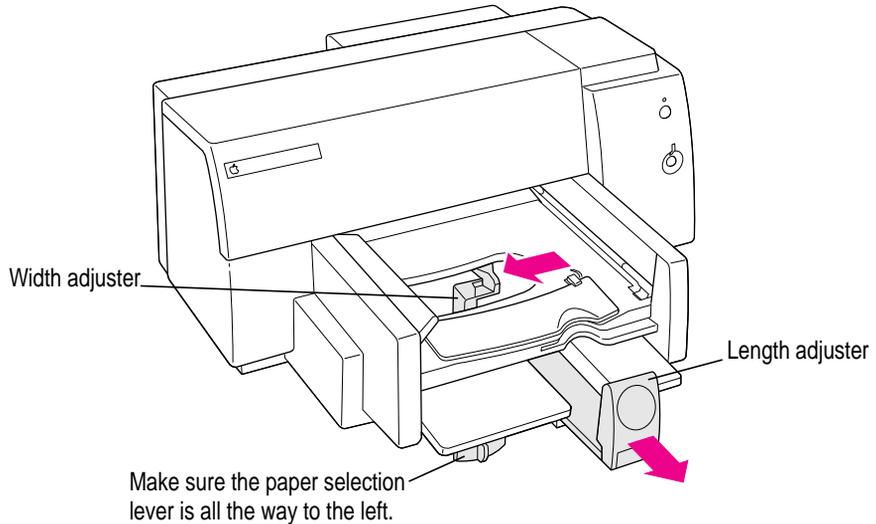

- 2 Make sure the edges are even on all sides before inserting a stack of paper.


3 Load the paper into the lower tray, print side down.

The wrapper that the paper comes in usually tells which side to print first.

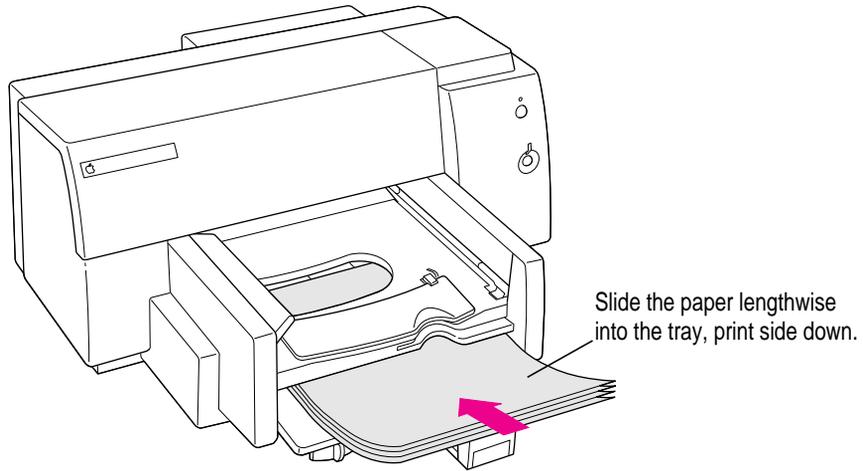

Note: Illustrations inside the printer cover remind you how to insert paper and envelopes correctly.

4 Slide the paper adjusters in to touch the edges of the stack of paper.

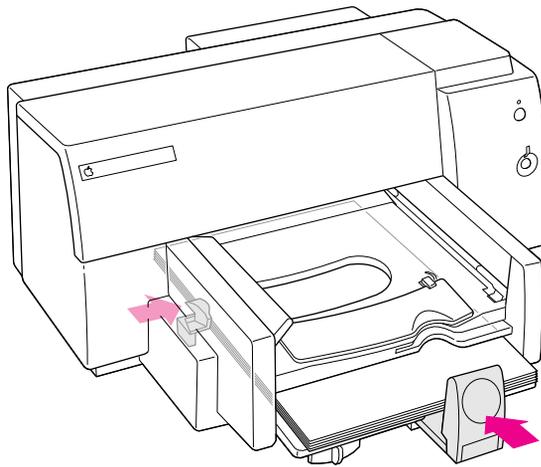

Aligning the ink cartridges


Whenever you install a new ink cartridge, follow these steps:

- 1 **If necessary, turn on the printer.**


The green power light should be on.

IMPORTANT If the resume light blinks, the ink cartridges are not installed properly. Turn the printer off. Then follow the steps in “Installing the Ink Cartridges,” earlier in this chapter.


- 2 **Make sure there is plain paper in the paper tray.**
- 3 **Choose Page Setup from the File menu.**
- 4 **In the Page Setup dialog box, click Utilities.**

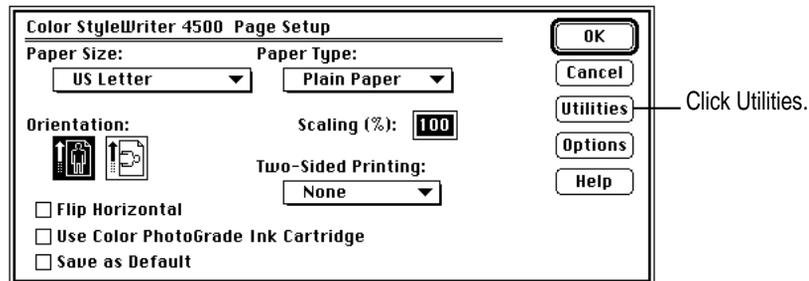

- 5 **In the dialog box that appears, find Align Print Cartridges and click Start.**

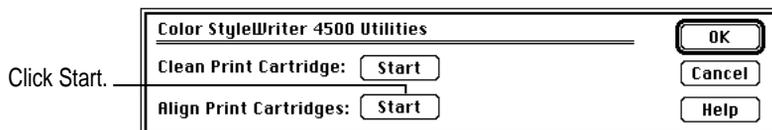

- 6 **Read the message that appears, and click Align.**

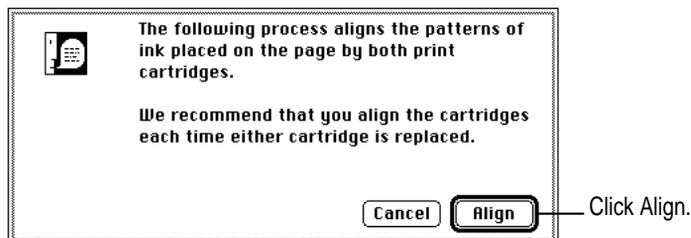


7 Examine the patterns that appear on the printed page.

From among the sets of parallel lines, choose the horizontal set and the vertical set for which the black and magenta lines are most closely aligned.


IMPORTANT If you cannot see black lines, make sure you have removed the tape from the black ink cartridge. If you cannot see magenta lines, remove the tape from the color ink cartridge

8 In the dialog box that appears, click the number and letter corresponding to the best aligned sets, and click OK.

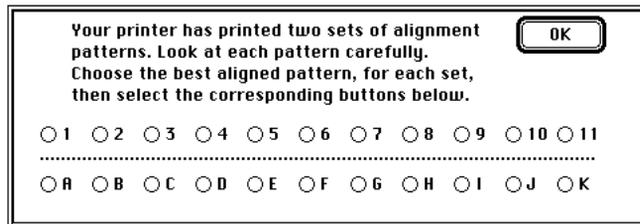

The printer prints a second page, containing a square and a cross, for you to verify that the alignment is acceptable.

9 If the patterns on the second printed page are acceptable, click OK.

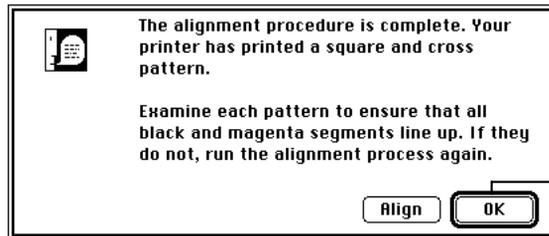

If the square and cross are properly aligned, click OK. To repeat the process, click Align.


10 Click OK in the remaining dialog boxes.

You have finished aligning the ink cartridges in your printer.


Printing the sample page

To see what your printer can do, print the demonstration page.

- 1 **Make sure the printer and computer are turned on.**
- 2 **Press and hold down the resume button for three seconds and release it.**

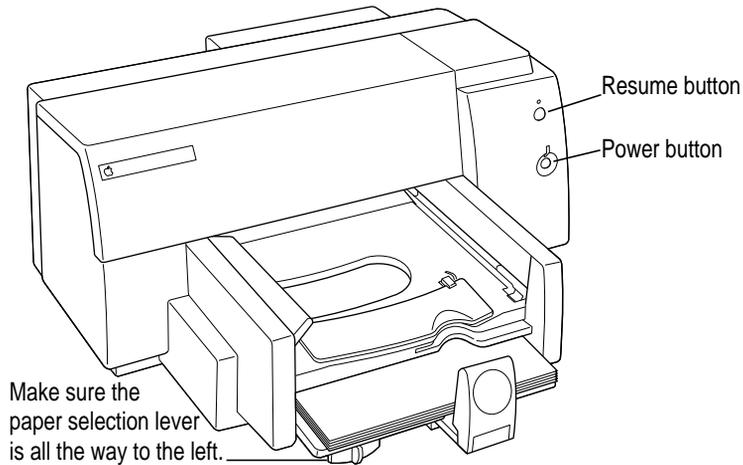


The printer prints the sample page, your first full-color document from your new printer.

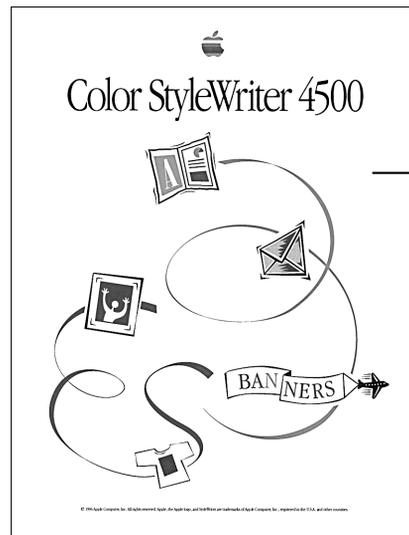

Note: You do not need to print this page every time you use the printer.

Using onscreen help with

CSW 4000 Series Printer Guide is a valuable source of information about your printer and printer software. The Guide menu is identified by a question mark (❓) in the upper-right corner of the screen.

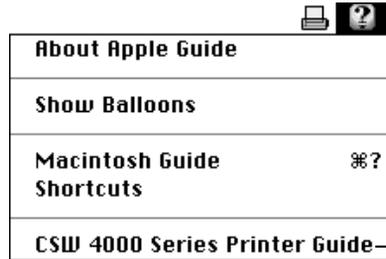


Choose this for onscreen help on how to use your printer.

To open the Printer Guide, make sure you are in the Finder. Then choose CSW 4000 Series Printer Guide from the Guide (❓) menu at the top of your screen.

Macintosh (or Mac OS) Guide also contains general information about printing, as well as other information about using your computer. Macintosh Guide is available while you're in the Finder.

First, click the Topics button.

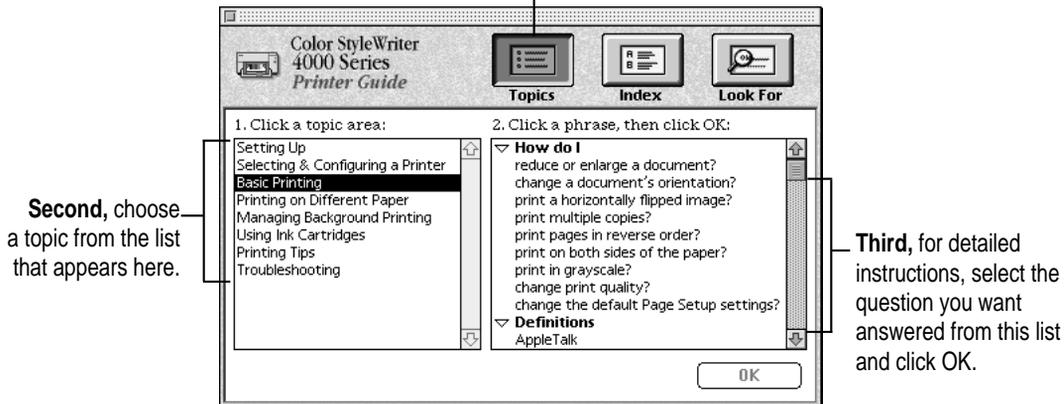

IMPORTANT A complete reference manual, in electronic form, comes on the *Apple Printer Software Collection* CD-ROM disc. The electronic manual is different from the onscreen help described here. For information on using the electronic printer manual, see the last page of this booklet.

Tips for using CSW 4000 Series Printer Guide

When you can't find the information you need

- In searching for help topics, use all three buttons at the top of Guide's initial window: Topics, Index, and Look For.
- If you're in a series of steps and want to return to the list of help topics, click the button marked Topics in the Guide window.


When you can't see what's behind the Guide window

Guide windows stay in front of other windows on the screen so that your instructions are never covered.

- Drag a Guide window by its title bar to move it out of the way.
- Click the zoom box once to shrink a guide window. (To expand the window, click the zoom box a second time.)

When you need more information about an instruction or term

- Click the "Huh?" button if it is available.
- If an unfamiliar word is underlined, click it to get a definition.

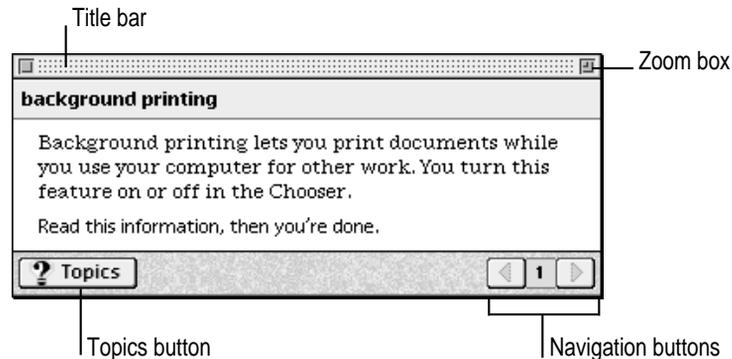



2

Printing



This chapter explains how to use the Color StyleWriter 4500 for everyday tasks. Before you follow the instructions in this chapter, make sure the printer is set up and working, as described in Chapter 1.

Planning documents with the Color StyleWriter 4500 in mind

Many printer options affect how much can fit on a page. Before you spend a lot of time laying out a document, set it up as you plan to print it:

1 Select the printer you plan to use.

If the Color StyleWriter 4500 is your only printer, and you followed the setup instructions in Chapter 1, you have selected your printer. If you have access to more than one printer, see “Switching Between Printers,” later in this chapter.

2 With the document active on your computer screen, choose Page Setup from the File menu and select the options you like.

The key areas that affect page layout are paper size, type, and orientation. When you’ve finished setting your options, click the OK button to return to your document. You can now format it as you like. Since you’ve already set your printing options, the document will print as you see it on your screen.

Printing a document

The next two sections explain the different ways you can print a document:

- **Quick instructions for printing standard documents.** To print documents that don't require any special options, see this section. (The section describes what a "standard document" is.)
- **Detailed instructions for printing other documents.** To print documents that require any of the nonstandard options, see this section.

Quick instructions for printing standard documents

To print a standard document, follow the instructions in this section:

- standard paper size, US Letter (8.5" by 11" in the United States)
- plain paper
- portrait page orientation (so when you look at the printed page, it is longer than it is wide)
- no special effects and normal print quality

Assuming you have already selected the printer in the Chooser as described in Chapter 1, and that the printer is filled with standard paper, you need only follow these steps:

- 1 While the document is in an active window, choose the Print command from the File menu.**

The Print dialog box opens on your screen.

- 2 Make sure the printer is turned on (the green power light glows).**
- 3 Click the Print button.**

After a few moments, the document starts to print. If background printing is turned on, you can continue working while the document is printing. You can also monitor and control the documents that are waiting to print. (See "Printing While You Use Your Computer" and "Monitoring and Controlling Background Printing," later in this chapter.)

Detailed instructions for printing documents

If your document is not standard, follow these steps:

- 1 **If you haven't already selected the Color StyleWriter 4500 in the Chooser, do so now.**

You already selected the Color StyleWriter 4500 in Chapter 1, and if it's the only printer you ever use, you won't need to do it again. If you do need to switch, see "Switching Between Printers," later in this chapter.

- 2 **Load the paper, envelopes, or other materials into the printer, as described in Chapter 1.**

Remember to adjust the external paper selector before filling the sheet feeder.

- 3 **While the document is active on your screen, choose Page Setup from the File menu and make adjustments in the dialog box that opens.**

If the default settings shown here are satisfactory, you can skip this step.

To indicate the size and type of paper in the paper tray, use these pop-up menus.

To print with a PhotoGrade cartridge in the printer, click to put an X in this box. (You may also want to choose Photograde from the Paper Type pop-up menu.)

Color StyleWriter 4500 Page Setup

Paper Size: US Letter Paper Type: Plain Paper

Orientation: Flip Horizontal

Scaling (%): 100

Two-Sided Printing: None

Use Color PhotoGrade Ink Cartridge

Save as Default

OK Cancel Utilities Options Help

Choose the settings you want, then click OK.


For manual duplex printing (two-sided), use this pop-up menu.

You can type a number from 25 to 400. Numbers smaller than 100 reduce the image; numbers greater than 100 enlarge it. Changing the size may change the pagination.

For more information about optional features, see "Adjusting Color Options," later in this chapter.

IMPORTANT Make sure you correctly indicate the size of the paper, envelopes, or other material you have in the paper tray. If you change the paper size in this dialog box, you might also want to look over your document to see if any of the page breaks have changed. For information on non-standard sizes, see "Defining Your Own Custom Paper Sizes," later in this chapter.

4 Choose Print from the File menu and make adjustments in the dialog box that opens.

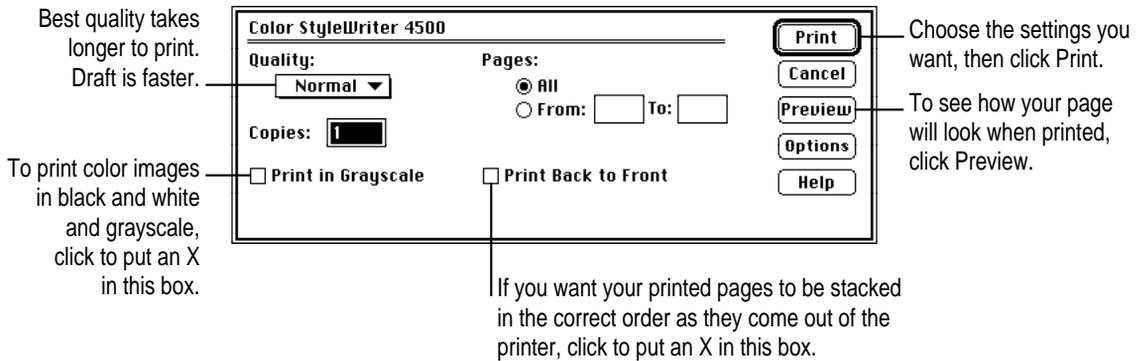

Item in dialog box	What you use it for
Quality	Select which level of quality you want. Generally, the higher the quality, the longer the document will take to print. The Draft option is available only when you use Plain paper or Transparency.
Pages	Indicate how many pages of the document to print. To print the whole document, click All. To print a range of pages, type the beginning and end page numbers.
Copies	Type how many copies of the document you want.

5 Click the Print button.


After a few moments, the document starts to print. If background printing is turned on, you can continue working while the document is printing. You can also monitor and control the documents that are waiting to print. (See “Printing While You Use Your Computer” and “Monitoring and Controlling Background Printing,” later in this chapter.)

Printing while you use your computer


You can continue to work on your computer while printing on the Color StyleWriter 4500. The feature that gives you this ability is called *background printing*. To turn background printing on or off, follow these steps:

- 1 **Select Chooser from the Apple () menu.**
- 2 **Click the CSW 4000 Series icon in the Chooser.**

If your printer is connected to your computer by a LocalTalk connection kit, click the CSW 4000 Series (AT) icon.

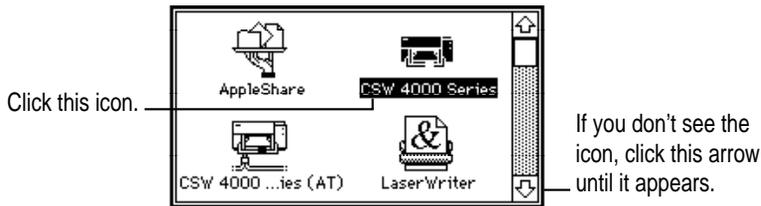

- 3 **Click to turn background printing on or off.**

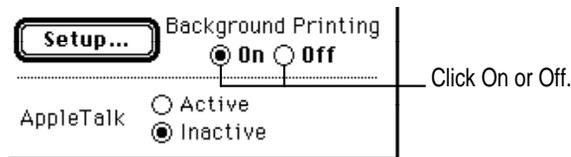

- 4 **Click the close box in the upper-left corner of the Chooser.**


Once background printing is turned on, it is in effect whenever you print, until you turn it off. When you click Print in the Print dialog box, a message appears for a moment to tell you the document is being prepared. Once the message disappears, you can continue other work. Your computer may pause occasionally while it processes the document for printing. See “Monitoring and Controlling Background Printing,” next, for more information.

Note: Printing may be slower with background printing on. If you turn background printing off, however, you must wait for printing to finish before you can continue your work. Any time you print with the color PhotoGrade cartridge on PhotoGrade paper, you should turn off background printing.


Monitoring and controlling background printing

If you are using background printing, you can use the PrintMonitor to check on and control your print requests. (To turn background printing on and off, see “Printing While You Use Your Computer,” earlier in this chapter.)

- 1 While printing is in progress, choose PrintMonitor from the Application menu.

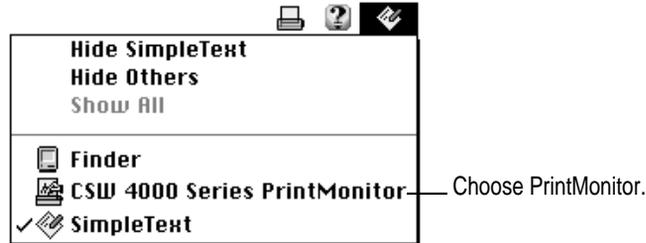

A window opens listing the documents that are printing or waiting to print:

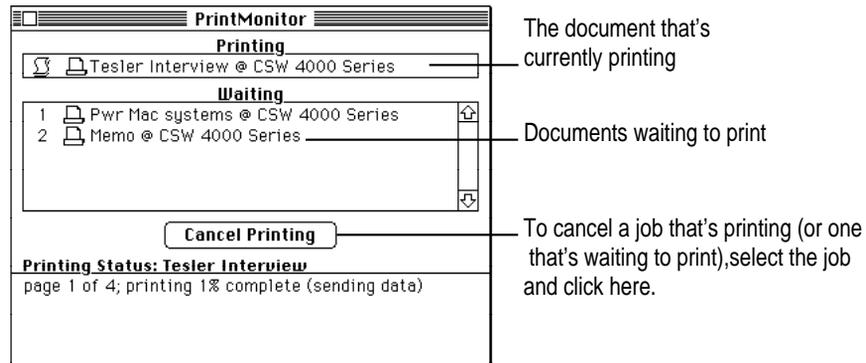


- 2 You can check the activity on your printer and cancel printing if you want to.

Adjusting color options

To adjust the way colors are printed, follow these steps:


- 1 Choose Print from the File menu.
- 2 In the dialog box that appears, click Options.

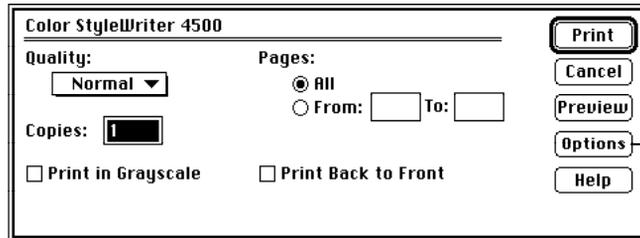

Click Options.

- 3 Select your color options.

Unless you have specific needs, it may be best to leave the settings on Auto.

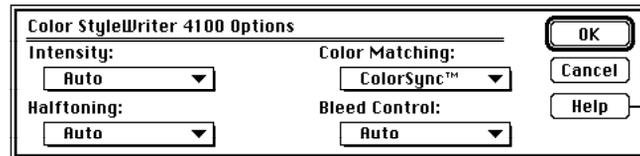

To use the CSW 4000 Series Printer Guide onscreen help, click Help. For information on using the Printer Guide, see Chapter 1.

The ColorSync color-matching system makes sure that colors look as consistent as possible no matter what device you use to view them—monitor or printer. In addition, ColorSync helps give you the best possible colors when you export the image to another Mac OS–based computer with ColorSync installed or print it on another color printer.

Note: For the best color, you need to choose a specific profile for your monitor. In the ColorSync control panel, choose the D50 profile for your monitor. If there is no D50 available for your monitor, choose Apple Multiple Scan 17 – D50. The D50 profile gives you better colors.

For more information on ColorSync, see Appendix C.

Printing a photograph

You can print exceptional quality photographic or other color images, using the color PhotoGrade ink cartridge.

- Use the color and color PhotoGrade cartridges to print color and black-and-white photographs or pictures with vivid colors.
- Use the color and black cartridges for black text, documents that are mainly text, banners, and pictures other than photographs.

1 Put paper in the lower paper tray, print side down (as usual).

If you're using Apple Color Ink–Jet Color PhotoGrade paper, the package tells you which side to print on. You can use plain paper to print photographs. For best results, use PhotoGrade paper.

IMPORTANT Before you print using the color PhotoGrade ink cartridge and color PhotoGrade paper, be sure to turn off background printing. With background printing on, the printer experiences small delays when the computer is busy with something else. The resulting print quality may not be the best you can get from your Color StyleWriter 4500.


2 Turn on the printer.

The green power light should glow.

3 Open the top cover.


The carrier moves to the center of the printer. The resume light flashes.

4 Remove the black ink cartridge.

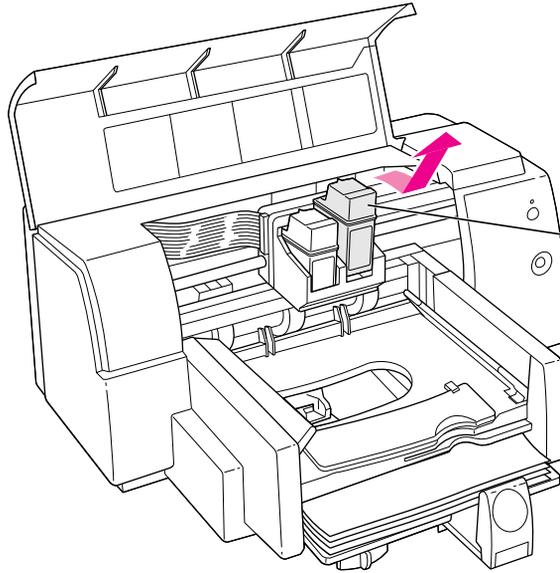


To pop the cartridge loose, pull its top toward you. Then lift it out of the carrier.


5 Put the black ink cartridge in the storage case.

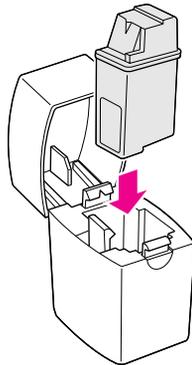

- 6** Slide the color PhotoGrade ink cartridge down into the carrier, and press it into place.

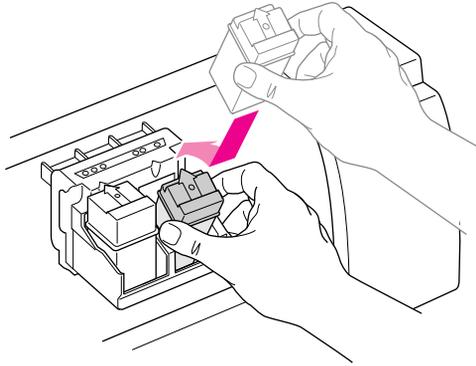

Press the cartridge all the way into the carrier.

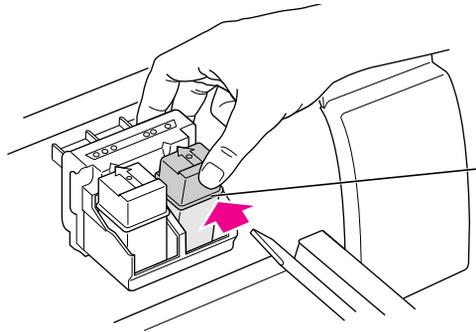


Note: The color PhotoGrade ink cartridge includes specially formulated black and color inks for photorealistic printing.

- 7** Close the printer's cover.

The carrier returns to its home position on the right side of the printer, and the resume light stops flashing.

8 Choose Page Setup from the File menu.

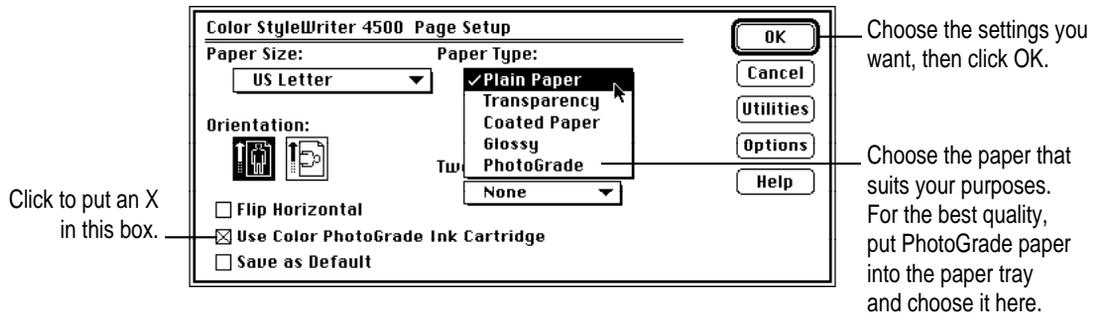

9 Choose Print from the File menu.

10 In the dialog box that appears, click Print from the File menu.

The document containing the photographs begins to print. It may take several minutes before you can see the results.

When you're done printing photographs


Take the time to reset the printer for normal printing. Here are some settings to remember:

- Take the color PhotoGrade ink cartridge out of the printer, put it into the storage case, and put the black ink cartridge back into the printer.
- In the Page Setup dialog box, change Paper Type back to Plain Paper (if that's what you plan to use next). Click the Use Color PhotoGrade Cartridge checkbox to remove the X.
- Remove any special paper from the lower paper tray, and replace it with plain paper.

Printing a banner


For the best results, use Apple Color Ink–Jet Banner Paper. If you use continuous computer paper or Z-fold paper instead, 20-pound paper is best.

- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose either Banner US Letter or Banner A4 from the Paper Size pop-up menu.

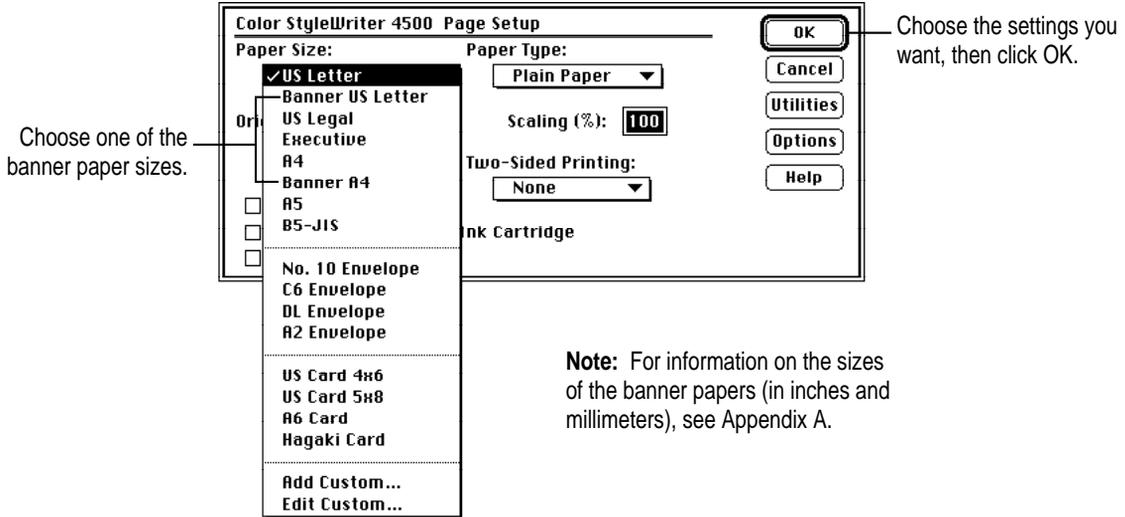


- 3 Slide the paper selection lever to the right until it clicks into place.**

An icon on the lever indicates that this is the setting for banner paper.

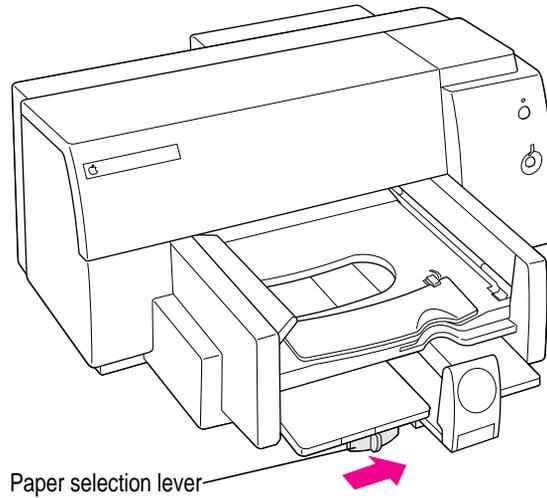

- 4 Remove all paper from the lower tray.**

- 5 Flip up the banner support in the upper tray.**

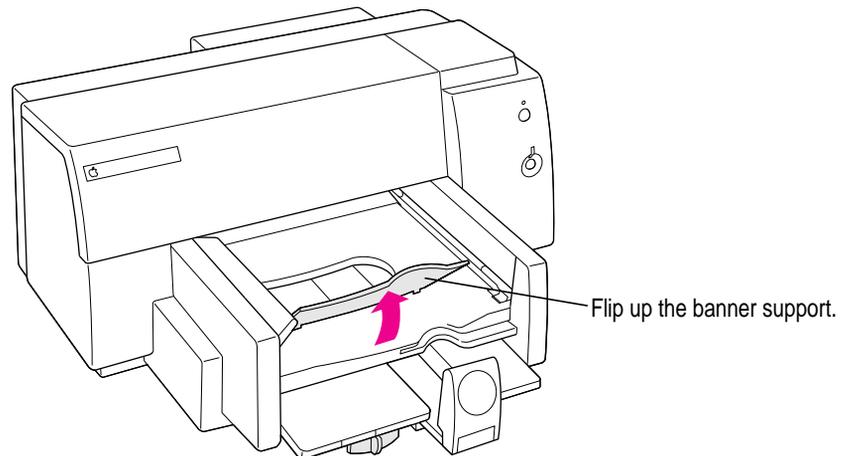


- 6 Estimate how many sheets your banner needs to print.**


Using the application that created the banner, you should be able to tell whether the banner will cover three sheets or four sheets, for example. The printer prints a maximum of 20 sheets in one banner.

- 7** From a stack of Z-fold banner paper, tear off at least one sheet more than you need to print the banner.
- 8** Tear off the perforated strips, if any, and then unfold and refold the stack to make sure pages don't stick together.

Put this edge into the paper tray first, at the top of the stack

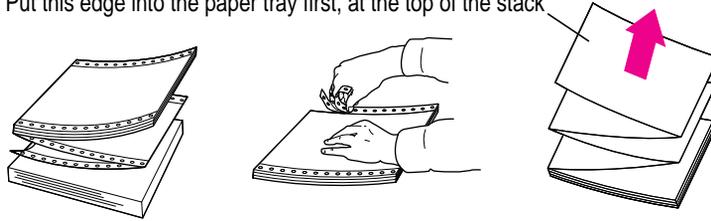


- 9** Put the paper in the lower paper tray, with a torn edge at the top of the stack, facing lengthwise into the printer.

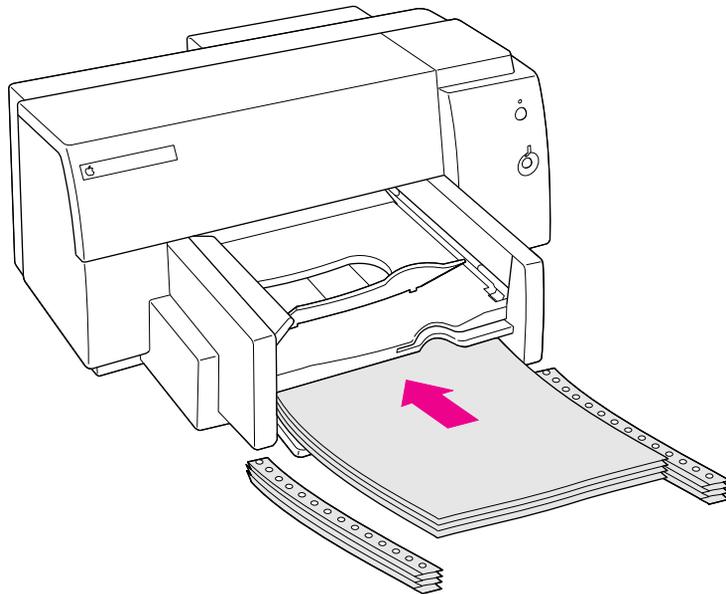

- 10** Slide the paper adjusters so they touch the edges of the stack of paper.

- 11 Make sure the banner document is the active window on the screen, and choose Print from the File menu.
- 12 In the dialog box that appears, click Print.
- 13 When printing stops, press the Resume button as many times as necessary to advance the remaining banner paper out of the printer.

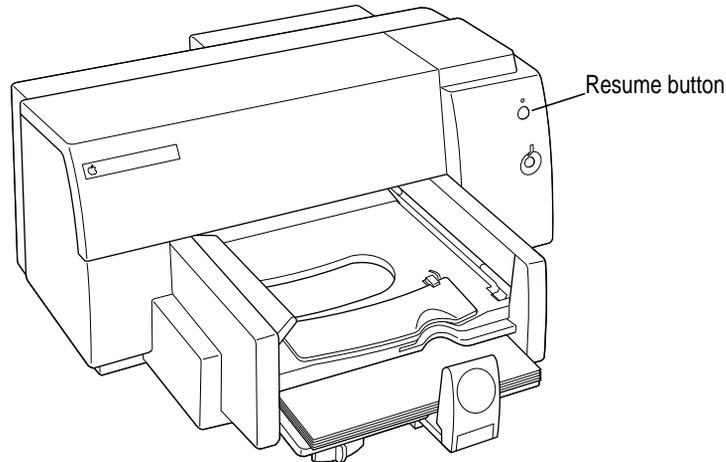

When you're done printing banners

Take the time to reset the printer for normal printing. Here are some steps to remember:

- In the Page Setup dialog box, select the Paper Size appropriate for the document you want to print next.
- Slide the paper selection lever to the left. (The lever is located underneath the left corner of the lower paper tray.)
- Lower the banner support in the upper tray.
- Put some paper into the lower paper tray.

Printing envelopes

If you're printing a single envelope, use the single-envelope slot (and leave the paper in the paper tray). If you're printing a stack of envelopes, use the paper tray


Notes about envelopes

See the instructions that came with the applications you use to see if they offer special, easy ways to format and print envelopes. If not, choose the envelope size you're using in the Page Setup dialog box and format the envelope text as you like.


IMPORTANT The Color StyleWriter 4500 cannot print flush with the left edge, so return addresses may print closer to the center than you like. To avoid this, use envelopes preprinted with your return address, or put the address on a label or a rubber stamp.

Single business-size envelopes

- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose either No. 10 Envelope or DL Envelope from the Paper Size pop-up menu.

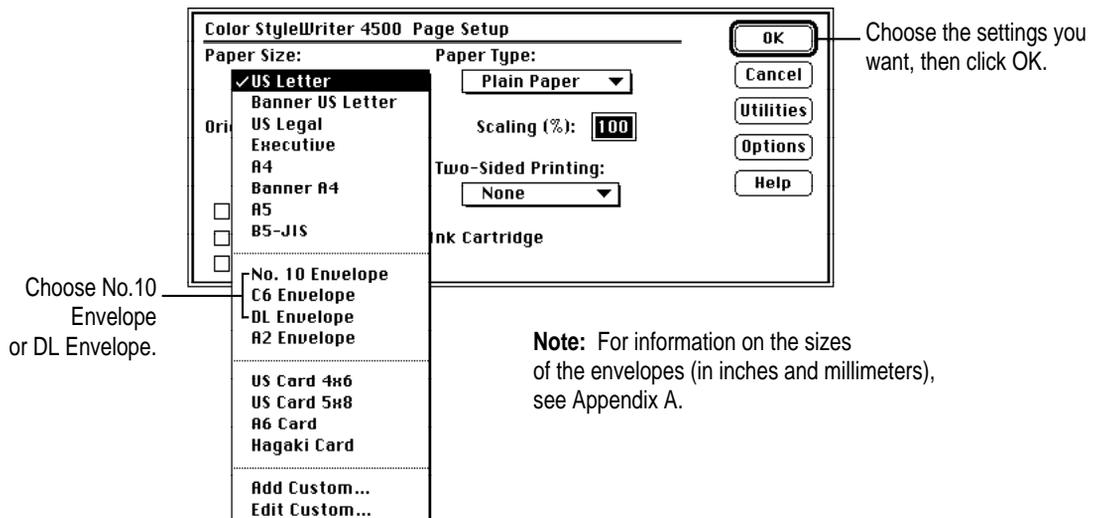

- 3 Slide an envelope into the single-envelope slot until it stops.

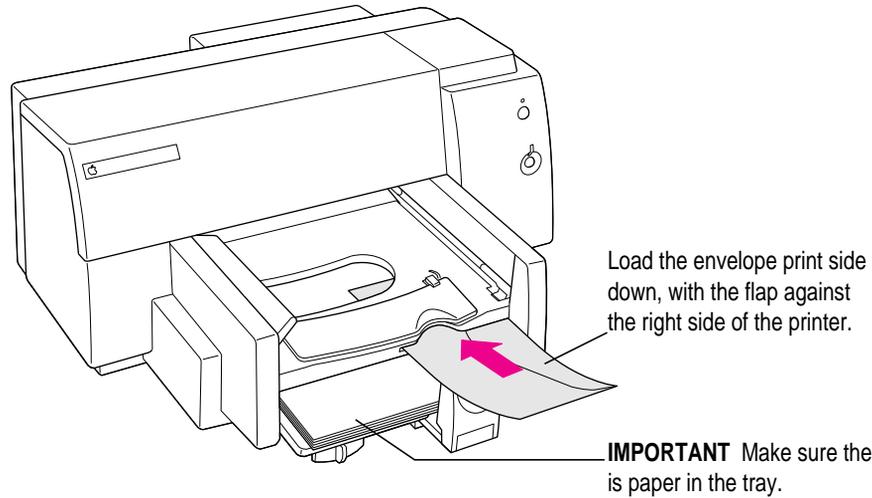


- 4 Choose Print from the File menu.

If you are using an application that includes settings for printing envelopes, follow the application's instructions for setting up the address and placing the envelope in the printer.


- 5 In the dialog box that appears, click Print.

A stack of envelopes

- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose the envelope you're printing from the Paper Size pop-up menu.

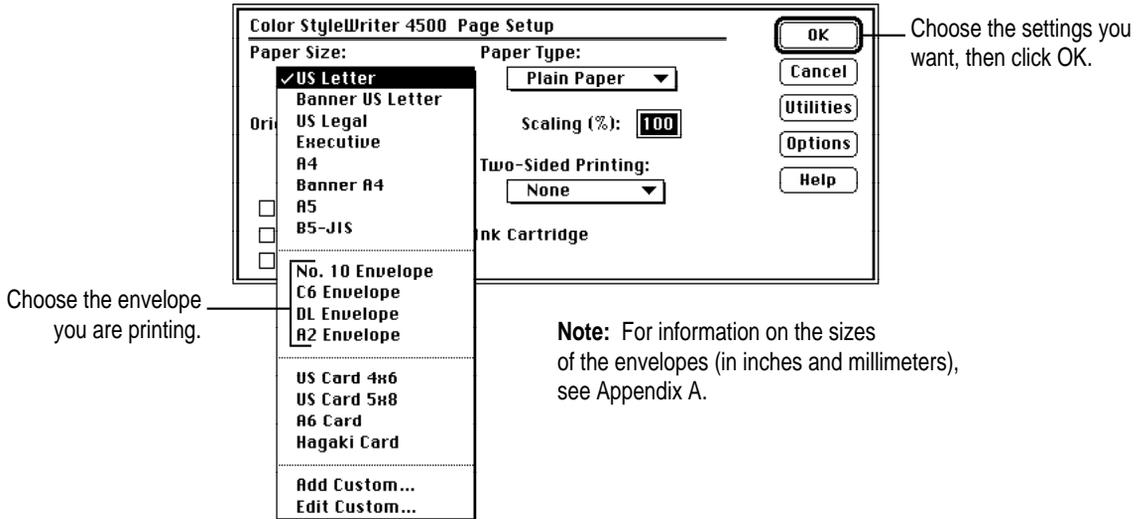


- 3 Slide the paper adjusters out as far as you can.

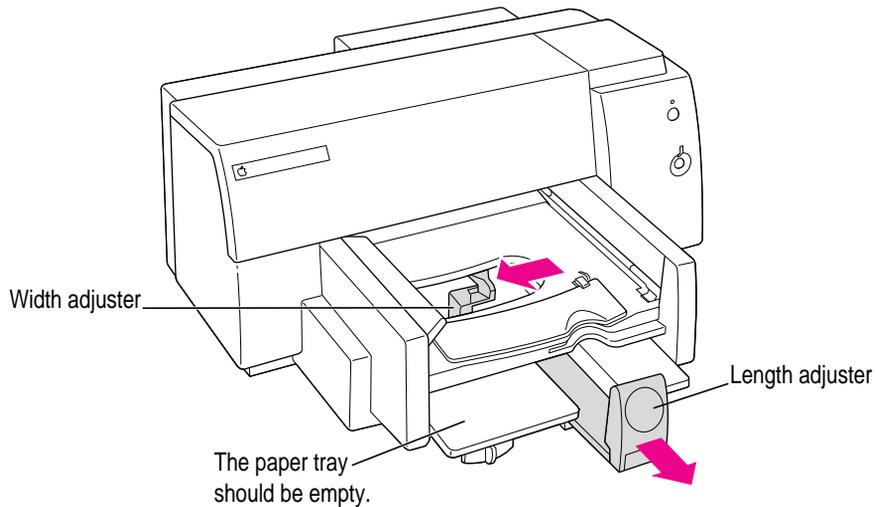


4 Put a stack of up to 20 envelopes in the printer.


If the envelopes are thick, reduce the number in the stack.

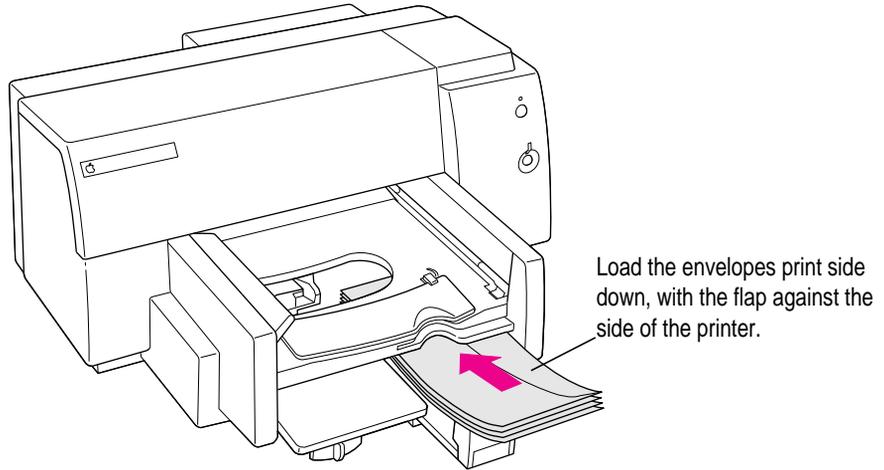

5 Slide the paper adjusters in so they touch the edges of the stack of envelopes.

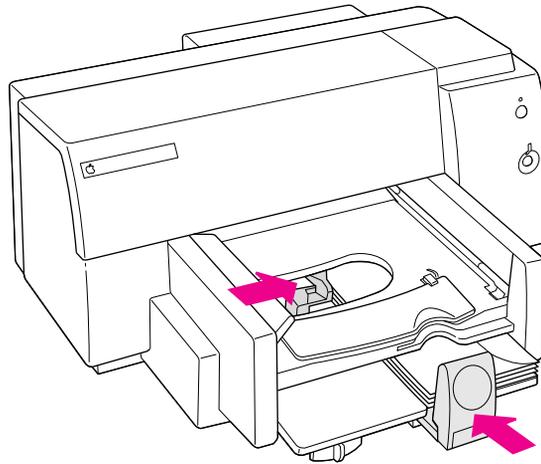

If you're printing small, invitation-size envelopes (such as A2 or C6), you may have to lower the handle on the length adjuster so you can slide it far enough under the upper paper tray.

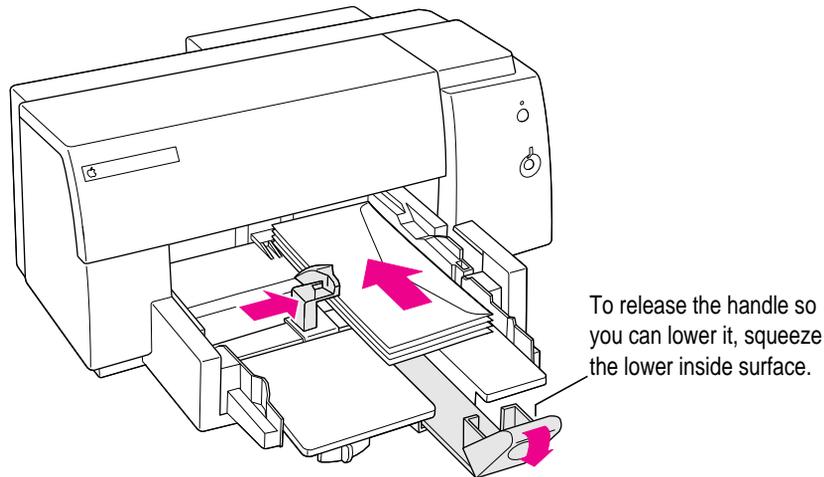

6 Choose Print from the File menu.

If you are using an application that includes settings for printing envelopes, follow the application's instructions for setting up the address and placing the envelope in the printer.

7 In the dialog box that appears, click Print.

When you're done printing envelopes


Take the time to reset the printer for normal printing. Here are some steps to remember:

- In the Page Setup dialog box, select the Paper Size appropriate for the document you want to print next.
- Remove any unused envelopes and make sure there is paper in the lower paper tray.


Printing transparencies

For best results, use Apple Color Ink-Jet Transparency Film or transparencies designed for ink-jet printers.


- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose Transparency from the Paper Type pop-up menu.

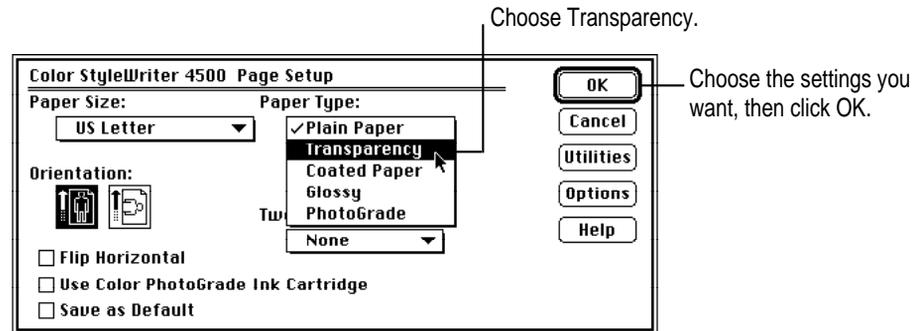

- 3 Choose Print from the File menu.
- 4 In the Print dialog box that appears, choose Best from the Quality pop-up menu.

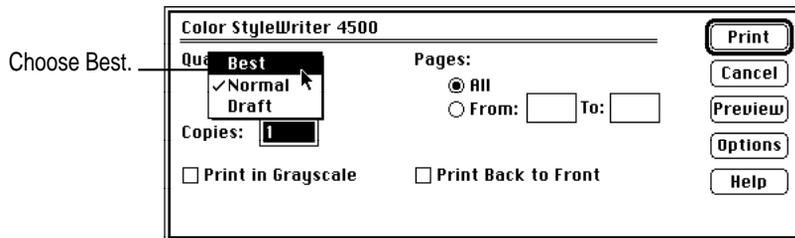

- 5 **Insert the transparencies into the paper tray, shiny side down, with the joined edge into the paper tray first.**

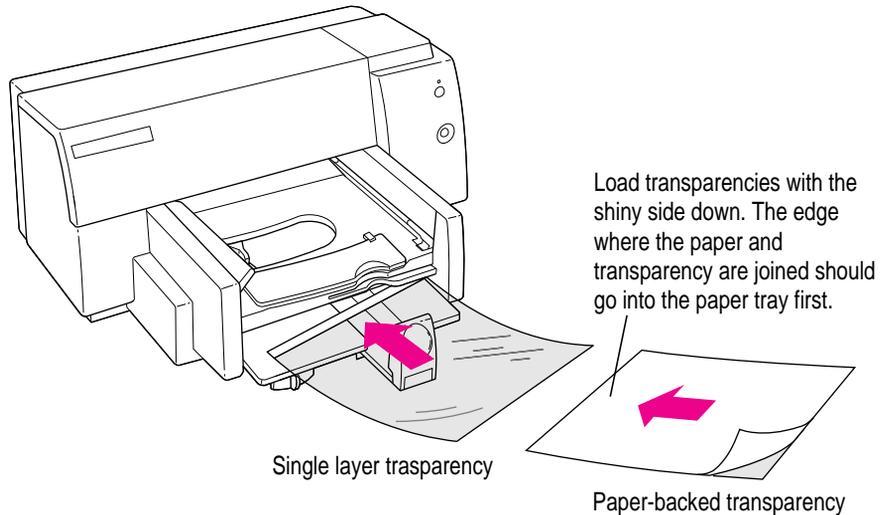

- 6 **Slide the paper adjusters in so they touch the edges of the stack.**
- 7 **Choose Print from the File menu.**
- 8 **In the dialog box that appears, click Print.**

In printing transparencies, the printer uses more ink, puts it on the transparency surface more slowly, and allows more time for inks to dry between sheets. For these reasons, transparencies take a while to print.

When you're done printing transparencies


Take the time to reset the printer for normal printing. Here are some steps to remember:

- In the Page Setup dialog box, select the Paper Type appropriate for the document you want to print next.
- Remove any unused transparencies and put some paper into the lower paper tray.
- Next time you print, remember to change the print quality back to Normal (or whatever is appropriate) in the Print dialog box.


Printing labels

For best results, use labels designed for ink-jet printers.

- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose US Letter or A4 from the Paper Size popup menu, and choose Plain Paper from the Paper Type pop-up menu.

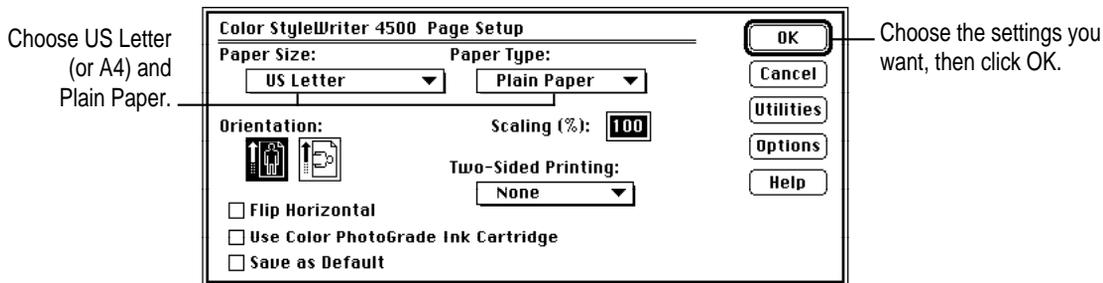


- 3 Choose Print from the File menu.
- 4 In the Print dialog box that appears, choose Normal from the Quality pop-up menu.

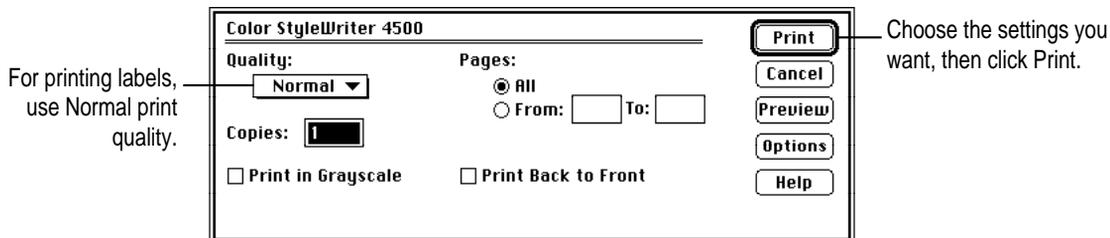

- 5 Fan the edges of the label sheets to make sure they are separated.
- 6 Insert into the paper tray sheets of labels, face-down, on top of about 5 sheets of plain paper that's the same size.

You can insert up to 25 sheets of labels.

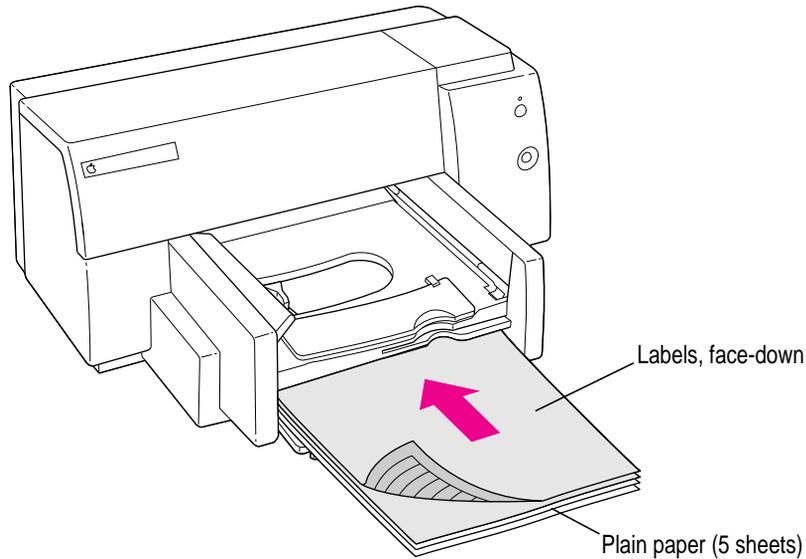

- 7 Slide the paper adjusters in so they touch the edges of the stack.
- 8 Choose Print from the File menu.
- 9 In the dialog box that appears, click Print.


When you're done printing labels

If you expect to print on plain paper next, you can leave the print settings as they are.


Printing index cards and postcards

You can use the Color StyleWriter 4500 to print on index cards and postcards.


- 1 Choose Page Setup from the File menu.
- 2 In the Page Setup dialog box, choose the card size you want from the Paper Size pop-up menu, and choose Plain Paper from the Paper Type pop-up menu.

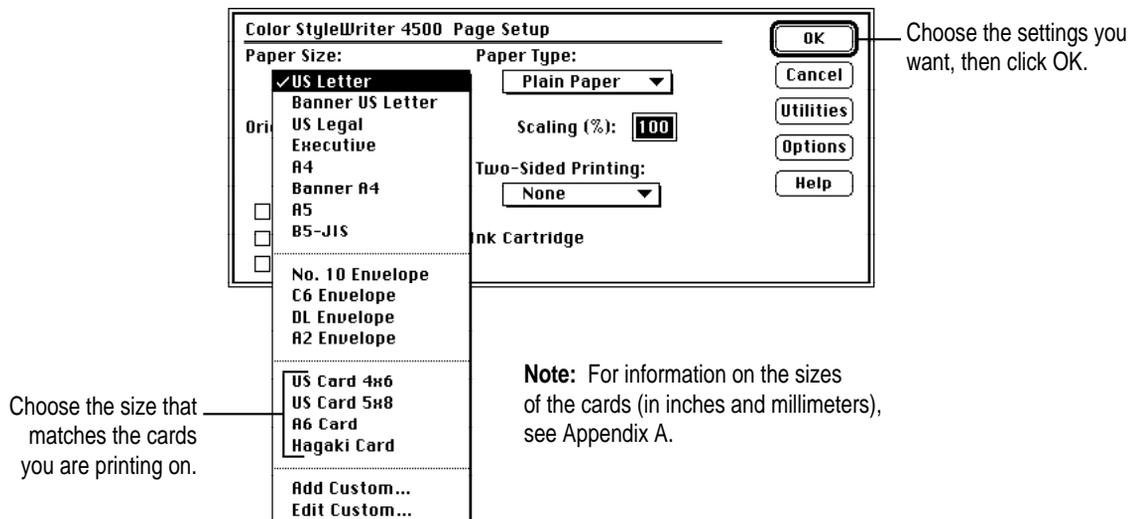


- 3 Remove the upper tray and raise the card guide.

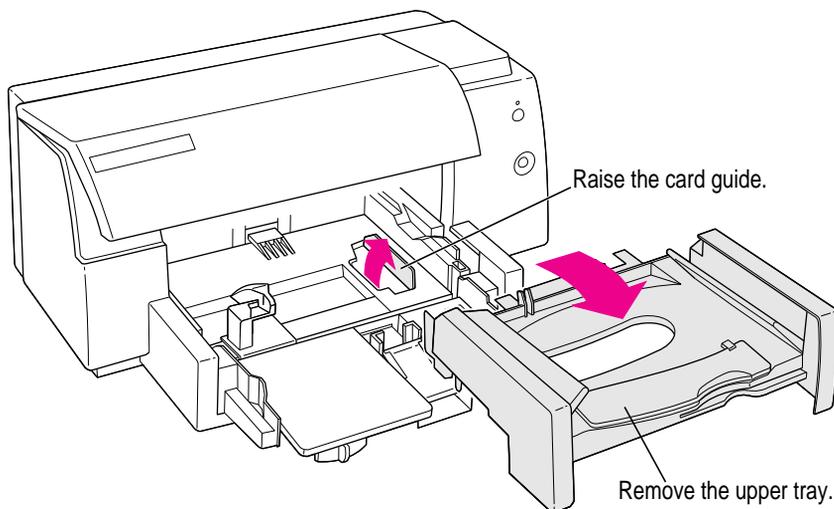

- 4 Place a stack of up to 30 cards in the lower paper tray, resting against the raised card guide.
- 5 Lower the handle on the paper length adjuster.

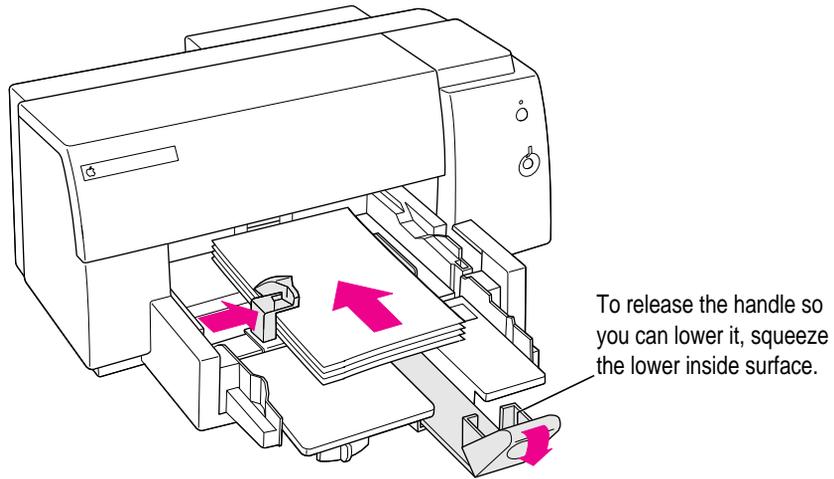


- 6 Slide the paper adjusters in so they touch the edges of the stack.

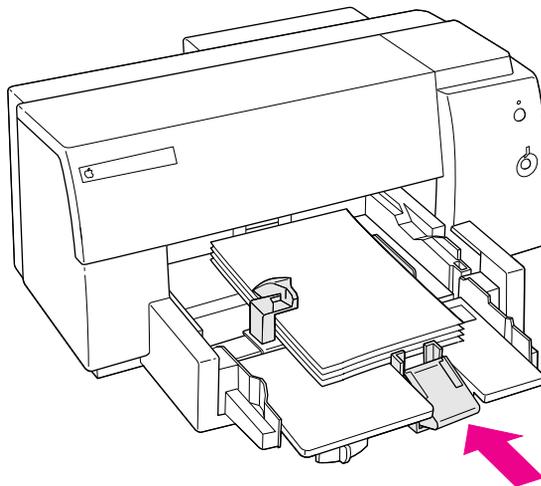

7 Replace the upper tray and raise the card guide.

You may need to lift the printer cover for easy access.

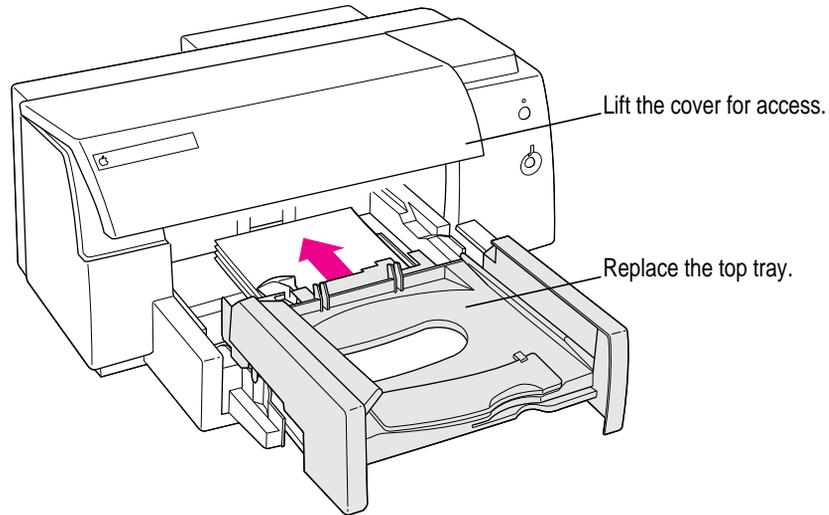

8 Choose Print from the File menu.

When you're done printing index cards or postcards

Take the time to reset the printer for normal printing. Here are some steps to remember:

- In the Page Setup dialog box, select the Paper Size appropriate for the document you want to print next.
- Remove the top tray, then remove any unused cards and lower the card guide.
- Replace the top tray and make sure there is paper in the lower paper tray.
- Raise the paper adjuster handle back to its vertical position.

Two-sided printing

To conserve paper, you can print on both sides, putting the paper through the printer twice. The first time through, the printer prints odd-numbered pages; the second time through, it prints even-numbered pages.


Note: Use 28-pound or heavier paper for two-sided printing. If you use a lighter paper, the ink may bleed through the paper.

1 Put paper in the lower paper tray.

Remove any paper from the upper tray.

2 Choose Page Setup from the File menu.

3 Choose Book or Tablet from the Two-Sided Printing pop-up menu, and click OK.

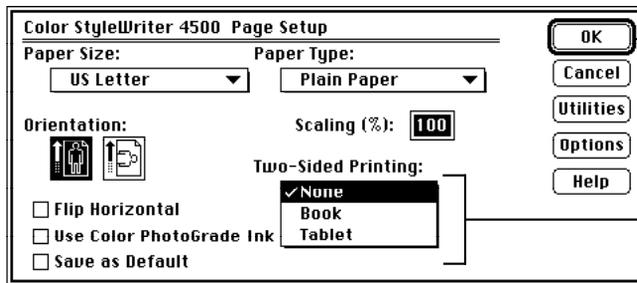

Choose the settings you want, then click OK.

Book prints the pages so they can be bound on the left, as a book.



Tablet prints the pages so they can be bound at the top, as a tablet.

4 Choose Print from the File menu.

The printer automatically prints the odd-numbered pages and delivers them in the upper paper tray.

5 Following instructions on the screen to bring PrintMonitor to the front, choose PrintMonitor from the Application menu.

- 6** Following instructions on your screen, put the stack of printed pages back into the lower paper tray.

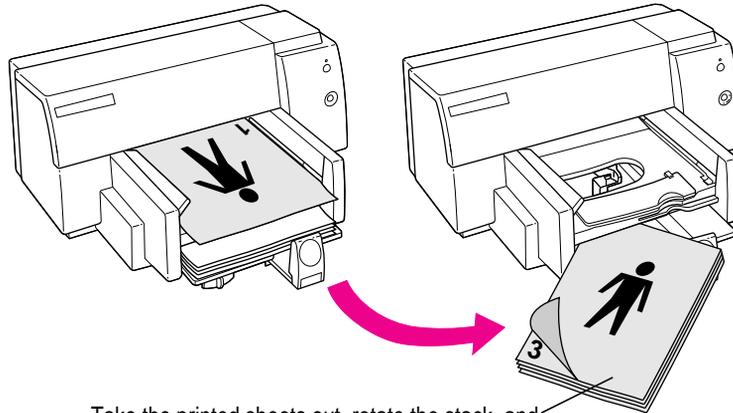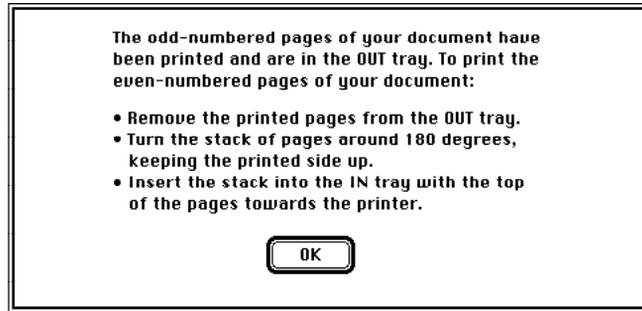

Take the printed sheets out, rotate the stack, and insert it into the lower paper tray, with the printed side up. The second side will be printed according to what you chose (Book or Tablet) in step 3.

- 7** When the paper is ready, click OK.

When you're done with manual duplex printing (two-sided)

Take the time to reset the printer for normal printing. In the Page Setup dialog box, choose None from the Two-Sided Printing pop-up menu.

Printing a flipped document


You can flip a document, reversing text and pictures so they are correct when you transfer the image to another surface (such as a T-shirt). Flipping can also be useful when you print transparencies. (You can write on the transparency without smearing the ink printed on the reverse side.)

- 1 **Put paper in the lower paper tray, print side down (as usual).**

If you're using transparencies, put them in rough side down.

- 2 **Choose Page Setup from the File menu.**

- 3 **Click Flip Horizontal and click OK.**

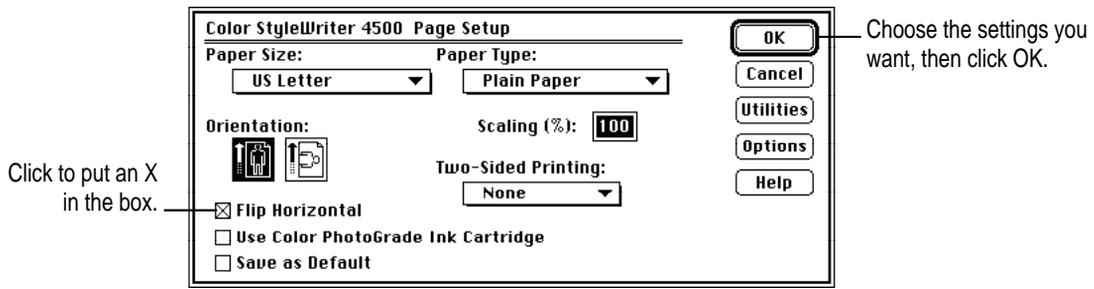

- 4 **Choose Print from the File menu.**

- 5 **In the dialog box that appears, click Print.**

The text and pictures print backwards. To see the reverse image, hold the page up to a mirror.

When you're done printing flipped documents

Take the time to reset the printer for normal printing. Here are some steps to remember:

- In the Page Setup dialog box, click Flip Horizontal to remove the X from the checkbox.
- If you used transparencies or special paper, replace it with standard paper in the lower paper tray.

Defining your own custom paper sizes

Occasionally, you may want to print on paper whose size does not appear in the Paper Size menu on the Page Setup dialog box. If the size of the paper falls within these ranges, you can use it:


Width: 5 to 8.5 inches

Length: 5.83 to 14 inches

To print on the nonstandard paper, follow these steps:


- 1 Put the paper lengthwise into the lower paper tray.**

For easier access, you can remove the upper paper tray, and then put it back when the paper is in place.

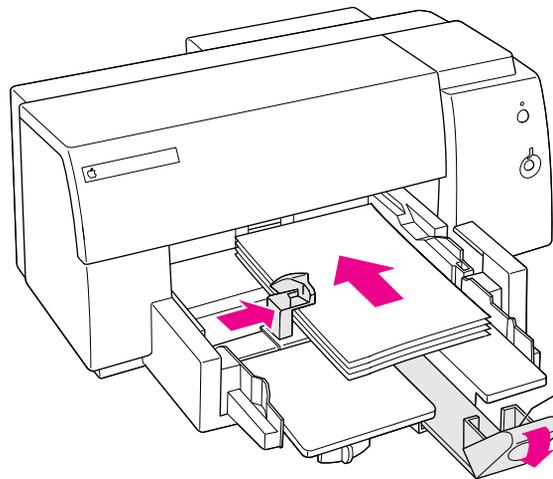

If the paper is shorter than 8.6 inches, squeeze the handle so you can lower it before you push the adjuster against the stack of paper.

- 2 Choose Page Setup from the File menu.
- 3 Choose Add Custom from the Paper Size pop-up menu.
- 4 In the dialog box that appears, type the appropriate information and click OK.

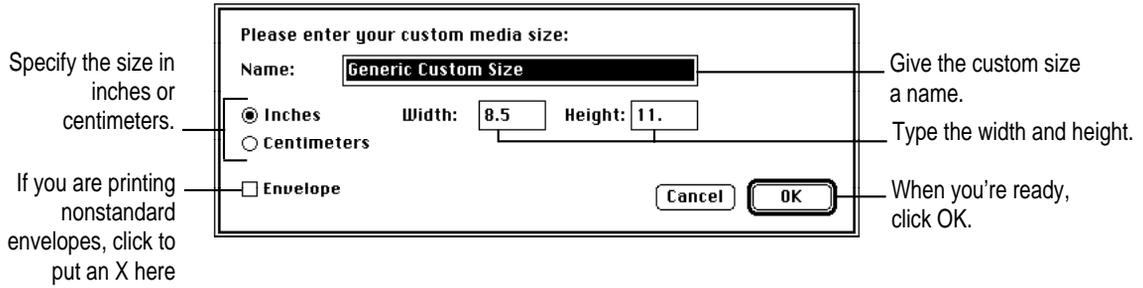

- 5 Choose Print from the File menu.

3

Tips on Paper, Quality, Speed, and Cost



This chapter explains how to use different materials and printing options to meet your needs.

Choosing print materials

Here are some tips on when and how to use different print materials.

Plain paper

Use plain paper for everyday printing.

- Print quality may vary depending on the manufacturer of the paper. If you're not happy with one kind of paper, try a different brand. For consistent results, use one of the special papers designed for the Color StyleWriter 4500 printer.
- You can use any plain paper, including plain copier paper. Paper weight can range from 16 to 36 pounds, though 20-pound paper is recommended.
- Don't use erasable typing paper, damaged or wrinkled paper, stapled paper, or multipart forms ("carbonless carbons").
- Plain paper almost always has one side that is better for printing than the other. See the package label to determine which side is better, and load that side face down in the lower paper tray.



Apple Color Ink-Jet Premium Coated Paper

This bright white coated paper is great for creating high-quality presentations, newsletters, and reports.

- Use only coated paper designed for use with the Color StyleWriter 4500.
- One side of the paper is a little whiter than the other and is better for printing. See the package label on the coated paper to determine which side is better, and load that side face down in the lower paper tray.

Apple Color Ink-Jet Glossy Paper

This glossy, heavyweight paper produces vibrant, permanent color images.

- Use only glossy paper designed for use with the Color StyleWriter 4500.
- When loading a stack of glossy paper into the paper tray, put a single sheet of plain paper at the bottom of the stack to prevent misfeeding.

Apple Color Ink-Jet PhotoGrade Paper

Use this heavyweight, photo-quality paper together with the color Photograde ink cartridge for printing photorealistic images.

- Use only PhotoGrade paper designed for use with the Color StyleWriter 4500.
- Load the PhotoGrade paper so that the shiny side is face down in the lower paper tray.

Apple Color Ink-Jet Banner Paper

Use this paper to print a continuous document that contains pages strung together—for example, a birthday greeting.

- Use only banner paper designed for use with the Color StyleWriter 4500.
- When loading a stack of banner paper into the paper tray, make sure the torn edge at the top of the stack goes into the paper tray first.

Apple Color Ink-Jet Transparency Film

This fast-drying, smudge-proof transparency film is great overhead presentations.

- Use only transparencies designed for use with the Color StyleWriter 4500. These special transparencies may have a sheet of paper attached to them or a strip of tape at one end; leave the paper and the tape attached until after printing.
- Load the transparencies so that the paper backing or the tape strip is face up in the lower paper tray and the edge where the paper and film are joined or the taped edge goes into the tray first.

Labels

Use labels for addressing envelopes and other purposes.

- Use only labels designed for use with ink jet printers.
- Load the labels face down in the lower paper tray. Put about 5 sheets of plain paper under the stack of labels.

Index cards and postcards

Use index card or postcard stock when you want to print small messages, send greetings, post information on bulletin boards.

- Load the cards so that the side you want to print on is face down in the lower paper tray.

Materials you can print on


Here are details about the kinds of materials you can use in your Color StyleWriter 4500 printer.

Print material	Special instructions
Plain paper	<ul style="list-style-type: none">■ Use 16- to 36-pound paper.
Coated paper	<ul style="list-style-type: none">■ Use only paper designed for this printer.■ The whiter side should face down.
Index cards	<ul style="list-style-type: none">■ The print side should face down.
Glossy paper	<ul style="list-style-type: none">■ Use only paper designed for this printer.■ The shinier side should face down.
Color PhotoGrade paper	<ul style="list-style-type: none">■ Use only paper designed for this printer.■ The shiny side should face down.
Transparencies	<ul style="list-style-type: none">■ Use only transparencies designed for this printer.■ The transparency may have a paper backing or a paper tape on one edge. The paper or the tape should face up going into the printer.■ The edge where the paper and transparency are joined or the taped edge of the transparency should go into the paper tray first
Banner paper (continuous computer paper or Z-fold paper)	<ul style="list-style-type: none">■ Use plain paper banner paper.■ If there are perforated strips, tear them off.■ A torn edge at the top of the stack should go into the printer first.
Envelopes	<ul style="list-style-type: none">■ Make sure the envelope flap is folded down flat.
Labels	<ul style="list-style-type: none">■ To prevent misfeeds, put about 5 sheets of plain paper under the stack of labels you insert.■ Put the labels in the tray face down.■ In the Print dialog box, choose Plain from the Media pop-up menu.


For more information about paper sizes and specifications, see Appendix A and Chapter 2.

Quality

For highest-quality printing of photographs or images, choose Best quality, use the color PhotoGrade ink cartridge and print on PhotoGrade papers.

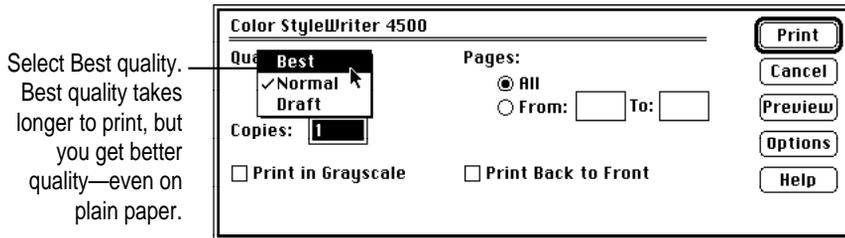

Also use the following selections in the Color Options dialog box. (To display the dialog box, click the Color button in the Print dialog box.)

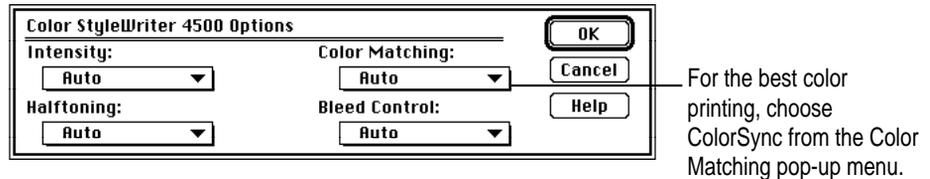

For the best color, you need to choose a specific profile for your monitor. In the ColorSync control panel, choose the D50 profile for your monitor. If there is no D50 available for your monitor, choose Apple Multiple Scan 17 – D50. The D50 profile gives you better “warm” colors.


For the best visual match between the colors on your monitor and printed colors, select the Page-White Gamma option in the Monitors control panel. (On some computers, the control panel is called Monitors & Sound.) To select a gamma option, open the Monitors control panel, then hold down the Option key while you click the Options button. In the Options window, click the Use Special Gamma checkbox to put a check in it. Then choose Page-White Gamma from the menu.

On a multiscan monitor, make sure that the color temperature, or intensity, is set to 9300 K (the default setting). See the monitor manual for instructions. If you select the Page-White Gamma option with a color temperature other than 9300 K, your monitor colors could look too red or too blue compared to printed colors.

For more information, see “Adjusting Color Options” in Chapter 2.

Speed

For faster printing, change the Print Quality setting in the Print dialog box. (To display the dialog box, choose Print from the File menu.)

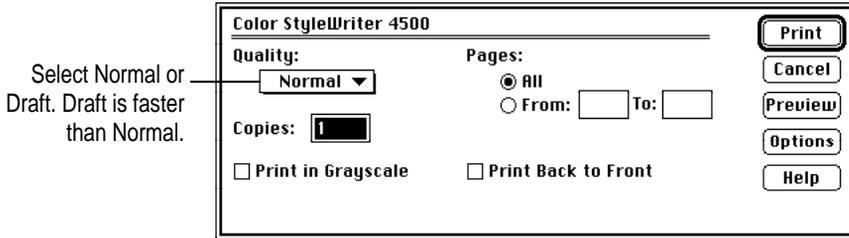

Color printing takes longer than black-only printing.

Cost

To reduce the amount of ink you use, select Draft quality in the Print dialog box whenever possible.

For simple graphics or for documents that are mostly text, use the color and black ink cartridges. The color PhotoGrade cartridge should be used in place of the black cartridge only when you need the best quality photorealistic color printing.

4

Maintaining Your Printer



It doesn't take much effort to keep your Color StyleWriter 4500 printer in good working condition. You simply have to replace the ink cartridges when they run out of ink and clean the printer or print head if you notice a problem. (For instructions on cleaning the print head, see “Cleaning the cartridges” in Chapter 5.)

For other service, see the information about service and support that comes with your Color StyleWriter 4500.

IMPORTANT Follow all the safety instructions given at the beginning of Chapter 1.

Replacing ink cartridges

Look carefully at your printed documents to see if a color is missing or faded. Sometimes it's obvious—such as when you run out of black ink. At other times you may notice that the colors seem wrong—such as when you're printing a nature scene and you run out of yellow.

The best way to verify that ink is running low is to print the sample page. (For details, see “Printing the Sample Page” in Chapter 1.)

For instructions on replacing an ink cartridge, see “Installing the Ink Cartridges” in Chapter 1.



Cleaning the outside of the printer

Before you clean the printer, turn it off and unplug the power cord. Then wipe the outside of the printer with a clean, soft cloth dampened with water. If necessary, you can use a mild soap or detergent. Be careful not to get any liquid in the power cord receptacle.

WARNING Don't use ammonia-based or alcohol-based cleaners on or around the printer—they may react with the plastic.

5

Troubleshooting



This chapter provides solutions to some problems that you may encounter while using your Color StyleWriter 4500 printer.

As long as you follow the maintenance instructions in Chapter 4, you're not likely to have any problems with your printer. The most common source of trouble is faulty software installation. To avoid these problems, follow the software installation instructions in Chapter 1.

WARNING If you have a problem with your Color StyleWriter 4500 printer and nothing presented in this chapter solves it, consult the service and support information that came with the printer for instructions on how to contact an Apple-authorized service provider or Apple for assistance. If you attempt to repair the Color StyleWriter 4500 yourself, any damage you may cause to the printer will not be covered by the limited warranty on your printer. Contact an Apple-authorized dealer or service provider for additional information about this or any other warranty question.



Safety precautions

To prevent damage to the Color StyleWriter 4500 printer and harm to yourself and other users, follow these safety tips.

- Don't touch anything inside the printer except as described in the instructions in this manual. Otherwise, you may damage delicate mechanical parts.
- Don't shake ink cartridges. Ink can leak out and cause stains.
- Don't touch the ink opening on an ink cartridge.
- Don't oil the inside of the printer.
- Don't attempt to disassemble the printer.
- Before you unplug the printer, make sure it is turned off. (The green power light should be off.) Turning the power off ensures that the carrier has returned securely to its home position and the cartridges have been capped.

The Chooser doesn't show the Color SW 4000 Series icon

If you open the Chooser and don't see the Color SW 4000 Series icon, you probably need to install the appropriate printer software. For instructions, see "Installing Your Printer Software" in Chapter 1.

Also, make sure the QuickDraw GX software is turned off. You can remove it from the Extensions folder or use the Extensions Manager to turn it off.

Installation is unsuccessful

If a message tells you that installation was not successful, check to make sure you turned off virus-detection software as explained in Chapter 1. If that doesn't work, try removing corrupted fonts, as described in the next section.

Removing items from your Fonts folder to solve installation problems

Items in your current Fonts folder can interfere with successful installation of the printer software. To correct the problem, follow these steps:

- 1** Quit all programs you are currently running.
- 2** Open the Fonts folder (inside the System Folder) on your computer.
- 3** Drag the following files out of the Fonts folder. (Look for files with exactly these names.)
 - Avant Garde
 - Bookman
 - Delphian
 - Garamond Narrow
 - Helvetica Black and Helvetica Compressed
 - Lubalin Graph
 - Lucida Bright
 - Machine
 - N Helvetica Narrow
 - Nadianne
 - New Century Schlbk
 - Old English Text
 - Onyx
 - Oxford
 - Swing
 - Zapf Chancery
 - Zapf Dingbats
 - Zeal

You can put the fonts temporarily into a new folder and drag the folder to your desktop. Then, after you install the Color StyleWriter 4500 software (including these fonts), you can drag the temporary folder to the Trash.

- 4** Repeat the software installation procedure in Chapter 1.

For more details about fonts, see Appendix B.

The computer crashes while attempting to print

When a computer suddenly stops working—either a message on the screen tells you a system error has occurred, or the mouse and keyboard act as if they’re disconnected—the computer has crashed.

If your computer often crashes after you tell it to print a document, your printing software may have become corrupted. Reinstall the printer software by following the instructions in “Installing Your Printer Software” and “Telling Your Computer to Use the Color StyleWriter 4500” in Chapter 1.

The computer doesn’t recognize the Color StyleWriter 4500

If you have selected the Color StyleWriter 4000 Series icon in the Chooser but nothing prints, or you get a message that no Color StyleWriter 4500 is connected, one of the conditions in the list that follows may be the cause.

Note: Before you try to solve the problem, choose CSW 4000 Series PrintMonitor from the Application menu to see if there are any error messages and to check how many print requests are waiting. If you repeatedly tried to print a document, there may be multiple copies waiting to print. You can delete anything you don’t want by selecting its title, and then clicking the Cancel Printing button. See “Monitoring and Controlling Background Printing” in Chapter 2.

- A plug may be loose. To make sure that all cables are securely connected, turn off the computer and the printer, then unplug each end of each cable you want to test and plug it back in. For connection instructions, see Chapter 1.
- You may have indicated the wrong port in the Chooser. Open the Chooser and change the port selection. (Look at the back of the computer to see whether you plugged the printer into the computer’s printer port [🖨️] or modem port [📡].)
- If your computer is not connected to a network, turn off AppleTalk in the Chooser.


- If you are trying to use a printer on a network, and the printer name isn't listed in the Chooser, make sure that the printer is turned on and connected to the network. Then try again to select the printer in the Chooser.
- If the printer is connected to a LocalTalk network, select the CSW 4000 Series (AT) in the Chooser, and make sure that AppleTalk is active. (The "AT" in the driver name stands for AppleTalk.)
- If the printer is on a LocalTalk network, someone may have given it a new name.
- You may be using the wrong printer software. Make sure you installed the software as described in Chapter 1 and that you have selected the printer as described in "Telling Your Computer to Use the Color StyleWriter 4500," also in Chapter 1.
- If you're using a PowerBook computer with an internal modem, change the serial port setting to Normal or External. For details, see "Special Information for PowerBook Owners" in Chapter 1.
- The printer may need to be reset. Turn the printer off, count to five, then turn it back on.

If you still can't resolve the problem, the printer may not be working properly. See the information about service and support that came with your printer.

A PowerBook has trouble printing to the Color StyleWriter 4500

Some PowerBook computers have special requirements for printing. See "Special Information for PowerBook Owners" in Chapter 1.

The lights indicate a problem

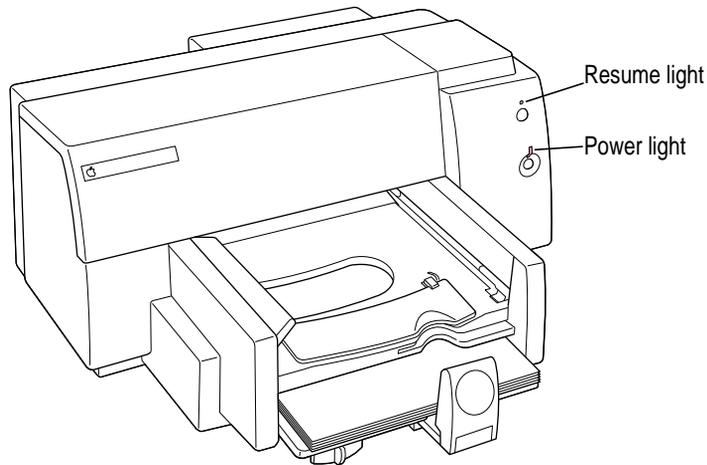

Sometimes the lights on the printer signal a problem.

Both lights are off.

- The printer is turned off. Press the power button. If you still don't see the glowing green light, make sure the printer is plugged into a power outlet and that the outlet has power.

Both lights blink.

- Paper may be jammed in the printer. Open the front cover and remove any jammed paper. To advance paper that is part way through the printer, press the resume button. Close the front cover and turn the printer off, then on again.
- The ink-cartridge carrier may be jammed. Close the front cover, turn the printer off, then on again.

The power light blinks, and the resume light is off.

- This is normal behavior when the printer is receiving data, printing, or waiting for ink to dry.

The power light glows steadily, and the resume light blinks.

- One or both of the ink cartridges may not be seated properly, or you may have forgotten to remove the tape from a new cartridge. Open the front cover. Remove both cartridges. Holding the black plastic sides of the cartridge, check to be sure the tape has been removed from the print head. Then replace the cartridges in the carrier. Make sure each cartridge is pressed all the way into the carrier. If a cartridge feels at all loose, it is not properly seated. For instructions, see “Installing the Ink Cartridges” in Chapter 1.
- The front cover may be open. Make sure it is closed.
- There may be no paper in the lower paper tray. Load paper.
- If you just printed a banner, you need to unload the remaining banner paper. Tear off the unused paper in the tray. Then press and release the resume button to advance the end of the banner through the printer.
- The printer may be confused. Press and release the resume button.

The printer seems slow

See the suggestions under “Speed” in Chapter 3.

Paper is jammed

Occasionally a piece of paper may get stuck inside the printer during the printing process. To clear a paper jam, follow these steps:

- 1** If necessary, open the front cover to see where the jam is.
- 2** Gently pull the paper free.
- 3** To advance any remaining paper, press and release the resume button.
- 4** Turn off the printer, then turn it on again.

Paper or envelopes feed improperly

If paper tears, gets skewed, or comes through the printer crumpled, it may not be entering the printer properly. Try the following:

- **Make sure you have loaded the paper correctly, paying special attention to both paper adjusters.**

For instructions on loading paper, see “Loading Paper into the Paper Tray” in Chapter 1.

- **Do not overload the paper tray.**

If you use heavier paper, fewer sheets will fit in the paper tray.

- **Do not force paper into the paper tray.**
- **Try to remove any torn or damaged pieces of paper from the printer.**

See “Paper Is Jammed,” earlier in this chapter.

- **Take the paper out of the paper tray and check it.**

Make sure none of the sheets is curled, bent, or dog-eared.

Make sure the edges of the stack line up evenly.

Make sure the paper adjusters aren’t too snug or too loose. The stack should lie flat (not bowed).

Load either envelopes or paper (not both) into the paper tray.

Make sure you have inserted envelopes correctly. The flaps should lie flat against the envelope, the edges should be smoothed flat, and no air should be trapped in the envelopes.

When loading transparencies, the side with the tape or the paper backing should face up. The taped edge or the edge where the paper and the transparency are joined should go into the paper tray first.

The Color StyleWriter 4500 won't print a particular document

If you attempt to print a document and no page is printed—not even a blank one—try the following:

- Check for messages on your computer screen. Also, choose CSW 4000 Series PrintMonitor from the Application menu.
- Your computer may be low on memory. See “Memory Is Low,” later in this chapter.
- Turn the printer off, then on again. (This resets the printer.)
- Repeat the printing process.

Sometimes problems disappear when you try to print your document again.

- Printing problems can often be caused by errors in your applications. If you can print from the SimpleText or TeachText application but not from another application, it's probably a problem with that application. Contact the publisher of that application for help.
- Restart your computer.

The printer acts as if it's working, but nothing is printed on the page

If your printer takes the paper, but doesn't actually print anything, try the following:

- If the ink cartridge is new, make sure that you removed the tape from its print head.
- Make sure the ink cartridges are correctly installed. (For instructions, see “Installing the Ink Cartridges” in Chapter 1.)
- The printer may be out of ink, or the cartridges need to be cleaned. You can check by seeing whether the sample page prints. See “Printing a Sample Page” in Chapter 1. For instructions on cleaning the cartridges, see “Cleaning the Cartridges,” later in this chapter.

Messages appear on your computer screen

Most messages that appear on your screen are self-explanatory. For example, they may tell you that the printer is out of paper or that the paper is jammed. Once you correct the problem, the message goes away.

These messages usually mean what they say. Occasionally they appear when you have the wrong port indicated in the Chooser. See “Telling Your Computer to Use the Color StyleWriter 4500” and “Special Information for PowerBook Owners” in Chapter 1.

Memory is low

Once in a while, your computer may be temporarily low on random-access memory (RAM).

Symptoms that indicate a memory problem:

- Some documents do not print.
- Some text incorrectly appears in the Geneva font.
- Characters look jagged.
- An “out of memory” message appears on your screen.

If you have a memory problem, try the following:

- Run only one program at a time; quit the ones you’re not using.
- If memory has been severely fragmented, you should quit all open applications, then reopen just the one you’re using.
- Increase the amount of memory you give to the program you’re printing from by using the Get Info command (as explained in the instructions that came with your computer)
- Turn off background printing. See “Printing While You Use Your Computer” in Chapter 2.
- In the Page Setup dialog box, choose Portrait (normal) orientation instead of Landscape (sideways) orientation.
- Print color documents using “Print in Grayscale” in the Print dialog box. Printing in grayscale takes the least memory.

- Turn on virtual memory in the Memory control panel. Virtual memory is described in the instructions that came with your computer. (*Note:* Using virtual memory can slow down your computer.)
- Obtaining additional RAM for your computer can solve some of these problems and improve printing speed.
- Restart your computer. Some software applications retain memory resources even after you have quit the application. The only way to recover this memory is to restart.

Documents did not print as expected

If the quality of printing is OK—not smeared or incomplete—but the result is not as you expected, you may have made a mistake in using the printer software. For example, in the Page Setup dialog box, someone might have checked “Save as Default.” If it is checked, and you are not getting the results you expect when you print, click the checkbox to remove the X. Make sure the settings in Page Setup are what you want, and then try printing again.

For additional help, read the subsections that follow for suggestions.

Text appears in the Geneva font or prints jagged

When your computer is low on memory, it may display and print certain fonts in the Geneva font. (Geneva looks like this.) Some text may also have jagged edges. To fix low-memory problems, see the preceding section, “Memory Is Low.”

For more information about fonts, see Appendix B, “Using Fonts With the Color StyleWriter 4500.”

Some rotated text may print jagged if you apply a style that has not been defined for the font. Try applying plain style to the text.

Graphic images don't print or appear jagged

Some advanced page layout and art applications use the PostScript page description language, a language that the Color StyleWriter 4500 does not understand. As long as your applications have a PICT preview option, you can print the file on a Color StyleWriter 4500, but the image may appear jagged. Also, images saved as encapsulated PostScript (EPS) may appear jagged on all non-PostScript printers. Whenever possible, use a TIFF or PICT version of the image.

Page breaks change unexpectedly

Most applications determine where to break pages by evaluating the information you provide in the Page Setup dialog box. Also, different types of printers space text in slightly different ways. The following actions can cause page breaks to change:

- changing from one type of printer to another
- changing the paper size in the Page Setup dialog box
- scaling the document in the Page Setup dialog box
- changing the orientation in the Page Setup dialog box

It's best to choose the printer you want and the Page Setup options you need before working on your page breaks.

A page prints off center

This problem may result from one of the following conditions:

- You have selected the wrong paper size in the Page Setup dialog box.
- The margins are set incorrectly in the document you are printing.
- Paper is not placed properly in the paper tray. See “Paper or Envelopes Feed Improperly,” earlier in this chapter.

Text lines up in columns on the screen but not when it prints

You may have used spaces (rather than tabs) to line up the text. Because printers interpret spaces differently than the screen does, the text may fail to line up when you print it. Try replacing the spaces with tabs.

You can also make columns by using spaces with a monospace font—such as Courier or Monaco—instead of tabs. A monospace font is one in which every character has the same width.

Everything prints backwards

Choose Page Setup from the File and see whether there's an X in the “Flip Horizontal” checkbox. If so, click to make the X disappear.

Print quality is poor

Most image problems are caused by problems with an ink cartridge or with your choice of paper. Don't use the following types of paper:

- erasable typing paper
- damaged, wrinkled, or stapled paper
- multipart forms (“carbonless carbons”)
- glossy paper, unless its especially designed for StyleWriter printers

For best print quality, use coated, glossy, or PhotoGrade paper. If you use plain paper, use 16- to 36-pound copier paper; 20-pound paper is recommended. Plain papers can vary widely. If you're not happy with one kind of paper, try a different brand.

The image is too light or too dark

If printing looks fuzzy because it's too light or too dark, try the following:

- Clean the cartridges. See “Cleaning the Cartridges,” later in this Chapter. If this doesn't help, replace one or both ink cartridges. See “Installing the Ink Cartridges” in Chapter 1 for instructions.
- Make sure you've chosen the correct paper type in the Print dialog box.
- If you're using plain paper, try flipping the stack of paper in the paper tray. Most paper has one side that's better for printing. If you're using other material, make sure you have it loaded in the correct orientation. See “Loading Paper into the Paper Tray” in Chapter 1.
- Try printing on a different kind of paper.
- Try choosing Best print quality in the Print dialog box.
- Try adjusting the Intensity control. Choose Page Setup or Print from the File menu, and then click Options. In the dialog box that appears, choose a different setting in the Intensity pop-up menu.

Thin lines fade or break up

Pick a darker color for the affected object, or try printing with the Pattern halftoning option selected. (In the Print dialog box, click the Options button, then choose Pattern from the Halftoning pop-up menu.)

The ink smears when rubbed

Don't handle pages before the printer drops them into the output tray. Wait several minutes before handling documents printed on glossy or PhotoGrade paper or on transparency film.

Printing appears on only part of the paper

Check the selections in the Page Setup dialog box.

Clean the cartridges. See “Cleaning the Cartridges,” later in this Chapter. If this doesn't help, replace one or both ink cartridges. See “Installing the Ink Cartridges” in Chapter 1 for instructions.

Colors don't look right on the printed page

Try the following:

- Print a sample page to see if you've run out of ink. For instructions, see "Printing a Sample Page" in Chapter 1.
- Clean the cartridges. See "Cleaning the Cartridges," later in this Chapter. If this doesn't help, replace one or both ink cartridges. See "Installing the Ink Cartridges" in Chapter 1 for instructions.
- Try printing the image with ColorSync turned on. See "Quality" in Chapter 3.
- Use a different type of paper.
- Make sure you've selected the paper you're printing on from the Paper Type pop-up menu in the Page Setup dialog box.

Unwanted horizontal white lines or stripes appear

Problems with print quality, especially horizontal white lines in your document, may mean a nozzle on the print head is clogged or your ink cartridge is running out of ink.


Clean the cartridges. See "Cleaning the Cartridges," later in this Chapter. If this doesn't help, replace one or both ink cartridges. See "Installing the Ink Cartridges" in Chapter 1 for instructions.

IMPORTANT Cleaning the cartridges consumes a small amount of ink. If you repeat the procedure unnecessarily, you reduce the life of your cartridges.


Cleaning the cartridges

To clean the print head, load plain paper in the paper tray and make sure the printer is turned on. Then follow these steps:

- 1 **Click Utilities in the Page Setup dialog box.**

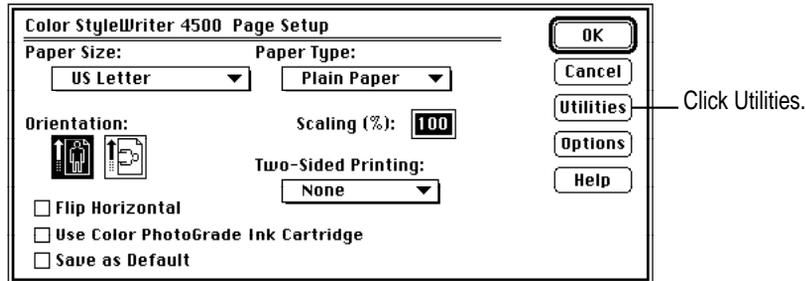

- 2 **In the Utilities dialog box, find Clean Print Cartridges and click Start.**

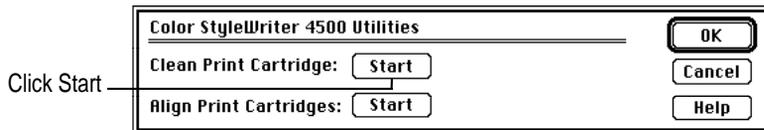

The printer cleans the print head, printing a page in the process.

The image prints wavy or distorted

Make sure that you are using a recommended type of paper. If the problem persists, see the information about service and support that comes with the printer.

Stains appear on printed pages

Stains on the backs or tops of printed pages may mean that ink has spilled inside the printer. If so, the ink can transfer to the rollers and from there to the paper.

Turn the printer off and unplug it. Then open the printer and carefully clean the rollers and platen with a soft, dry cloth.

Ink cartridges run out of ink too quickly

To extend the life of your ink cartridges, try the following:

- Select Draft print quality in the Print dialog box whenever you can.
- Don't clean the print head unless necessary.
- Don't print solid background colors unless necessary.
- Don't print the sample page unless necessary.



Appendix A Technical Information

• • • • •

General specifications

Marking engine

- Four-color thermal ink-jet engine; six-color with the color PhotoGrade ink cartridge

Resolution

The resolution differs according to the quality of printing you select. It is expressed in horizontal by vertical dots per inch (dpi).

- Best Black: 600 x 600 dpi
- Best Color: 600 x 300 dpi on coated or glossy paper or on transparencies (300 x 300 dpi on plain paper)
- Normal Black: 600 x 300 dpi
- Normal Color: 600 x 300 dpi on glossy paper or transparencies (300 x 300 dpi on plain or coated paper)
- Draft Black: 300 x 300 dpi
- Draft Color: 150 x 300 dpi

Engine speed

- Printing speed depends on the images printed and on the Mac OS-based computer used.

Connector cable

- Apple System/Peripheral-8 cable

Interface

- LocalTalk
- High-speed serial (RS-422-A)

Fonts

- TrueType font support
- 64 TrueType fonts including the fonts provided on your computer
- Adobe PostScript font support when used with Adobe Type Manager software (sold separately by Adobe Systems Incorporated)

Lower paper tray

- Holds up to 100 sheets of 20-pound (75 grams/meter²) paper, 20 envelopes, 20 sheets of banner paper, up to 30 cards, up to 50 transparencies, up to 25 sheets of paper labels.

Output tray

- Holds up to 50 sheets of 20-pound (75 grams/meter²) paper.

Printing materials

- Plain paper: Use 16-pound (60-g/m²) to 36-pound (135-g/m²).
- Envelopes: Use C6, DL, A2, or #10 envelopes, 20 to 24 lb. (75 to 90 g/m²).
- Continuous banner paper: Use 20 lb. (75 g/m²).
- Labels: Accepts paper labels designed for ink-jet printers.
- Cards: Use 110 lb. index maximum, 8.5 pt. maximum (110 to 200 g/m²).
- Apple recommends transparency film, premium coated paper, glossy paper, and color PhotoGrade paper especially designed for the Color StyleWriter 4500 printer. See your Apple-authorized dealer for more details.

Paper sizes in inches (") and millimeters (mm)

- U.S. Letter: 8.5" x 11" (215.9 mm x 279.4 mm)
- Banner U.S. Letter: 8.5" x 11" (215.9 mm x 279.4 mm)
- U.S. Legal: 8.5" x 14" (215.9 mm x 355.6 mm)
- Executive: 7.25" x 10.5" (184.15 mm x 266.7 mm)
- A4: 8.3" x 11.7" (210 mm x 297 mm)
- Banner A4: 8.3" x 11.7" (210 mm x 297 mm)
- A5: 5.8" x 8.3" (148.5 mm x 210 mm)
- B5 JIS: 7.2" x 10.1" (182 mm x 257 mm)
- #10 envelopes: 9.5" x 4.125" (241.3 mm x 104.8 mm)
- C6 envelopes: 4.48" x 6.37" (114 mm x 162 mm)
- DL envelopes: 4.33" x 8.66" (220 mm x 110 mm)
- A2 envelopes: 4.375" x 5.75" (111 mm x 146 mm)
- US Card 4x6: 4" x 6" (101.61 mm x 152.4 mm)
- US Card 5x8: 5" x 8" (127 mm x 203.2 mm)
- A6 card: 4.1" x 5.83" (105 mm x 148.5 mm)
- Hagaki card: 3.9" x 5.8" (100 mm x 148 mm)

Printable area in inches (") and millimeters (mm)

- Maximum printable line in portrait (normal) orientation: 8" (203.2 mm)
- Minimum margins
 - Left and right: 0.25" (6.04 mm)
 - Top: 0.26" (6.6 mm)
 - Bottom: 0.59" (15.0 mm)

Dimensions in inches (") and millimeters (mm)

- Height: 7.9" (199 mm)
- Width: 17.2" (436 mm)
- Depth: 16" (405 mm)

Weight

- Approximately 11.6 pounds (5.3 kilograms)

Operating environment

Temperature

- 5° to 40° C (41° to 104° F)

Relative humidity

- 10 percent to 80 percent, noncondensing

Altitude

- 10,000 feet

Storage environment

Temperature

- -40° to 60° C (-40° to 140° F)

Humidity

- 5 percent to 90 percent, noncondensing

Altitude

- 10,000 feet

Power consumption

Operating

- 2 watts maximum when off
- 4.5 watts maximum nonprinting
- 12 watts maximum when printing

Power requirements for AC power adapter

The electrical requirements vary depending on the country for which your model was manufactured.

Power supply

- AC power adapter

Apple printer supplies and accessories

If you have trouble finding any of the following products, the part numbers may help you describe them to the dealer. Note, however, that part numbers sometimes change as products are enhanced.

Ink cartridges

- Color ink cartridge: M5694G/A
- Black ink cartridge: M5693G/A
- Color PhotoGrade ink cartridge: M5692G/A

Connector cable

- Apple System/Peripheral-8 cable: M0197LL

Printing materials

Apple offers a complete line of high-quality, specialty ink-jet papers for use in your printer. These papers are specially designed to make your output look sharper, brighter, and more vibrant. Look for them at an Apple-authorized dealer.

- Apple Color Ink-Jet Transparency Film
- Apple Color Ink-Jet Premium Coated Paper
- Apple Color Ink-Jet Glossy Paper
- Apple Color Ink-Jet Color PhotoGrade Paper
- Apple Color Ink-Jet Banner Paper
- Apple Color Ink-Jet Greeting Card Kit

Available Options

- LocalTalk RJ-11 Connector Kit DIN-8: M1657Z/A
- LocalTalk Locking Connector Kit DIN-8: M2068LL/B

Where can you obtain these supplies and accessories?

See any Apple-authorized dealer. In the U.S., call 1-800-538-9696 for the location of the dealer nearest to you.



Appendix B Using Fonts With the Color StyleWriter 4500



A font is a collection of letters, numbers, and symbols in a distinctive typographic design. Your Mac OS–based computer and Color StyleWriter 4500 printer come with a variety of fonts that look great both on your monitor and on paper.

Fonts come in such a variety of formats that problems can sometimes arise. This appendix provides the information you need to avoid such problems and to solve them if they come up.

Kinds of fonts

The Mac OS–based computer works with three main kinds of fonts: TrueType, bitmapped, and PostScript fonts.

Two kinds of fonts come with your computer and the Color StyleWriter 4500 printer: TrueType and bitmapped. However, your system can use PostScript fonts as well when it has the proper software installed.

TrueType fonts

A TrueType font is scalable, describing a typeface without rigidly specifying a size. So it looks good whatever size you choose. TrueType fonts provide sharp text at any size on screen or on paper. You can mix and match TrueType fonts from various font vendors.




Courier

TrueType fonts store individual text characters as mathematical descriptions of lines and curves, rather than as groups of pixels (a bitmap). When a program asks for a character in a particular size, such as 33 points, the computer uses mathematical calculations to enlarge the character's outline to 33 points and fill in the dots for the monitor or printer output.

Sometimes you'll still get jagged edges when you print a document, even when you use a TrueType font. In nearly all cases, this is because there isn't enough memory available to scale the font properly for printing. This may happen, for example, when you're running several programs at the same time.

Because you don't need a separate font for each character size in order for your printing to look good (as you do with bitmapped fonts), TrueType font names don't have numbers in them.

How does a font look? To see what a TrueType or bitmapped font looks like on your screen, double-click the font's icon to open it. A sample of that font appears (in three sizes for TrueType fonts and in the size you opened for bitmapped fonts).

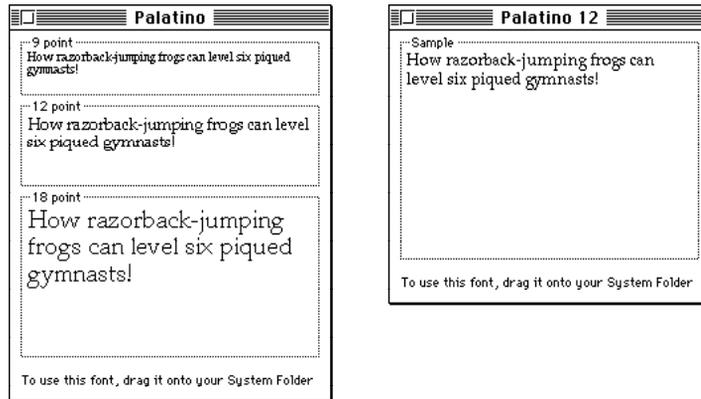

You can also use the Key Caps desk accessory to examine fonts. See the documentation that came with your computer for instructions.

Bitmapped fonts

Bitmapped fonts consist of “pictures” of a typeface at specific sizes. For example, you might have bitmapped fonts at 10-, 12-, and 18-point sizes installed in your computer. For best results you need a separate font file for each size of character you want to use.

The icon of a bitmapped font (also called a *fixed-size font* or *screen font*) has the single letter A on it. The font's point size appears at the end of its name.



Monaco 12

When you request a bitmapped character, your computer looks for an installed bitmapped font in the size you specified. (See “How the Computer Looks for Fonts” later in this appendix.) If it can't find that font, your computer tries to construct one by scaling a size that it does find.

In most cases, scaled bitmapped fonts don't look nearly as good as preinstalled ones. Such scaling is one reason for the jagged edges (sometimes called “jaggies”) you'll see on your screen or in a printed document when you request an uninstalled size (for example, 17-point Geneva).

Bitmapped fonts are designed on grids of 72 dots per inch (dpi)—the standard Mac OS–based computer screen resolution. Because of their correspondence to the standard screen resolution, bitmapped fonts in preinstalled sizes always look great on your display.

When you print a bitmapped font, it prints at a resolution of 72 dpi. Because most modern printers can print at resolutions far better than this (your Color StyleWriter 4500 prints at 300 dpi or better), printed bitmapped fonts almost always have jagged edges or stairstep sides.

Fortunately, the computer can use bitmapped fonts in combination with other font formats, reserving bitmaps for the screen and other kinds of fonts for the printer.

PostScript fonts

PostScript is a page-description language that defines the characters, symbols, and images that appear on each page of a document. A PostScript font comes as a pair of fonts: an outline font for the printer and a corresponding bitmapped font for displaying type on your screen.

No bitmapped font, no menu entry: If your system doesn't have the bitmapped font, the PostScript font name won't appear in your font menu.



Couri

Certain printers are designed specifically to work with PostScript fonts. While your Color StyleWriter 4500 is not a PostScript printer, it can use PostScript fonts if you have Adobe Type Manager software installed. Adobe Type Manager uses printer fonts to generate clean-looking screen text at any size. (This software is included with some installations of system software 7.5. It is available from your local Apple-authorized dealer for version 7.1.)

IMPORTANT Adobe Type Manager is not an Apple product. It is made and supported by Adobe Systems Incorporated. Only the version that comes with Apple Macintosh system software version 7.5 is supported by Apple.

PostScript printer fonts have no numbers associated with their names, because a single font can be scaled to any size. Many companies make PostScript fonts; the following illustration shows icons for Adobe, Bitstream, and Fontek PostScript fonts, plus a generic PostScript font icon.




How TrueType fonts work with other kinds of fonts

Although TrueType fonts offer distinct advantages, your Color StyleWriter 4500 printer can also use other kinds of fonts.

TrueType and bitmapped fonts

Mac OS–based computers running System 7 come with both bitmapped (screen) fonts and TrueType fonts installed. This maintains consistency with documents created on Mac OS–based systems that don't have TrueType fonts.

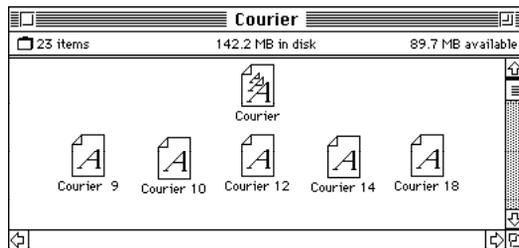

Bitmapped fonts look better displayed on the monitor, while TrueType fonts look better on a high-resolution printer such as the Color StyleWriter 4500. So, if you have both versions of the font available, your computer uses the bitmapped version when displaying the font on the screen (provided that the size you're using is available) and the TrueType version when printing the font on the Color StyleWriter 4500. To force the Macintosh to use only TrueType fonts everywhere, you must remove the bitmapped fonts.

For example, if a document uses 12-point Times®, available in that size as a bitmapped font and as a TrueType font, the system uses the bitmapped font on the screen and the TrueType font on the printer. If a document uses 4-point Times, the system scales the TrueType font to that size for both the screen and the printer, because a bitmapped version isn't available.

Using only TrueType fonts produces a closer match between the appearance of type on the screen and on paper. However, a document you've already created with bitmapped fonts will be reformatted with the corresponding TrueType fonts, and line breaks in the document may change. Similarly, if a document is created on a system that has TrueType fonts or Adobe Type Manager software installed, it may have different spacing, kerning, and so on, when opened on a system that doesn't have TrueType fonts or Adobe Type Manager software.

Keeping two font versions available

If you have a TrueType version of a font, you don't need a bitmapped version. However, although keeping both versions of a font takes up more disk space, there are several advantages to doing so.

Bitmapped fonts are hand-designed: a graphic artist planned each character in each font to look good on a screen. TrueType fonts are scaled by the computer to match what you request. At smaller point sizes, the bitmaps may appear sharper on the screen.

Additionally, scaling fonts takes time—sometimes up to several seconds in slower computers—but all MacOS-based computers can display a bitmapped font instantly.

TrueType and PostScript fonts

PostScript fonts were designed as fonts for PostScript printers. The Color StyleWriter 4500 wasn't designed to use PostScript. However, if you have Adobe Type Manager software installed, your computer can both display and print PostScript fonts.

Use different names: To avoid confusing the printer software, be sure that you don't install both TrueType and PostScript versions of the same font. For example, do not have a PostScript font file called *Times* and a TrueType font file called *Times* installed in your system at the same time.

How the computer looks for fonts

Here's the search order your computer uses to determine which font to display on your screen when you choose a specific size:

1. an installed bitmapped font in that size, if one exists
2. a scaled TrueType font, if no bitmapped font exists
3. an Adobe Type Manager (ATM) version of a PostScript font, if ATM is installed and if no TrueType version exists
4. a scaled bitmap if no ATM font exists


Here's the search order it uses to determine which font to print on your Color StyleWriter 4500 printer:

1. a scaled TrueType font, if one exists
2. an ATM version of a PostScript font, if ATM is installed and if no TrueType version exists
3. a scaled 72-dpi bitmap if no ATM font exists

Where fonts are stored

All fonts for your Color StyleWriter 4500 printer reside in special places within the System Folder. To install fonts, you drag them to the System Folder. Your computer will automatically put them where they belong—in the Fonts folder within the System Folder.

The Fonts folder can contain a total of 128 font suitcases (described in the next section), plus any number of PostScript fonts, up to the available storage capacity of your hard disk.

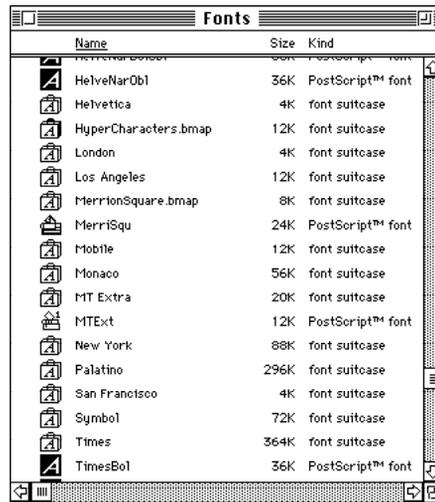

IMPORTANT Fonts installed in other folders or in the top level of the System Folder may not work correctly. Additionally, bitmapped and TrueType fonts stored outside of suitcases may not work correctly.


Suitcases

A font suitcase is a special folder for collections of fonts.



Courier

Suitcases provide a convenient way to organize fonts in the same font family. For example, it's a good idea to use a single suitcase (called *Courier*) for all fonts in the Courier font family—all Courier roman fonts as well as fonts with names like Courier Bold and Courier Oblique.

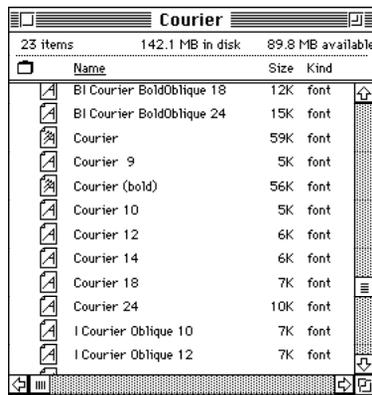

Combining suitcases: To merge all the fonts from one suitcase with another, drag one suitcase on top of the other. All the fonts from the dragged suitcase will go into the other, and the dragged suitcase will disappear.

Note: To avoid confusion, rename a font suitcase whenever you put more fonts into it. For example, if you decide to merge Helvetica, Helvetica Black, and Helvetica Compressed, name the suitcase something like “Helvetica Regular/Black/Condensed.”

A suitcase can also contain fonts from different font families, although you should keep all fonts of the same family in the same suitcase. All the fonts will still appear in menus with their proper names.

You treat a suitcase as you would a folder. To open a suitcase, you double-click it. To add a font, you drag the font's icon to the suitcase and drop it in. To remove a font, you drag its icon out of the suitcase.


To create a font suitcase, duplicate an existing one and throw away its contents. Then rename the suitcase as appropriate and drag whatever fonts you want into it.

You cannot have more than 128 font suitcases in the Fonts folder.

Size limits for suitcases: No matter how many fonts you have in a single suitcase, the Fonts folder counts the suitcase as a single unit. There's no limit to the number of fonts in a single suitcase, but the suitcase cannot be larger than 16 megabytes.

Styled fonts

Most fonts that come with your Color StyleWriter 4500 printer have defined styles. For example, if you open the Bookman font (contained in a suitcase in the Fonts folder, which is inside your System Folder), you see files for bold and italic versions of the font.

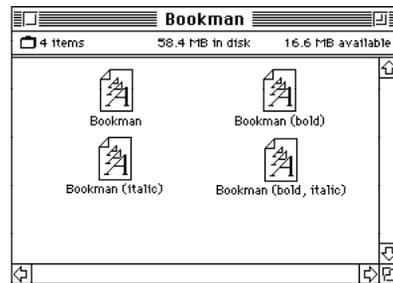

But fonts such as Chicago, Geneva, Monaco, and New York do not come with defined styles. If you open the Chicago font suitcase, you see only one file.



You can apply a style to a font like this by making a choice from the appropriate menu (Fonts, Style, Format, or some similar menu, depending on the application program). A font predesigned with a given style nearly always looks better than a font with a computer-generated “derived” style.

About style names: Predesigned styled fonts sometimes have names you may not be familiar with. For example, *roman* refers to a font without styling, or plain. *Oblique* is similar to italic. *Light*, *demi*, and *extra* are different kinds of bold.

Common questions about fonts

Here are some questions that often come up about fonts.

What kind of fonts should I buy?

Using a font that has both bitmapped and TrueType versions works best. The bitmapped version looks great on the screen and the TrueType fonts print beautifully on the Color StyleWriter 4500.

Avoid bitmapped fonts that don't have TrueType versions because they print with jagged edges on the Color StyleWriter 4500. By contrast, TrueType fonts work well, even if you don't have a bitmapped version.

If you have a PostScript printer or Adobe Type Manager, PostScript fonts look great on paper. The Color StyleWriter 4500 is not a PostScript printer.

Why don't all of my fonts appear in the Fonts menu?

You may not have all of your fonts placed correctly. All the fonts should be installed in the Fonts folder in the System Folder.

Additionally, some application programs let the user decide which fonts should appear in the Fonts menu. Check the manuals that came with your programs.

Why can't I see my Monaco 9, Geneva 9 and 12, and Chicago 12 bitmapped fonts?

These fonts are used by your Mac OS–based computer to display information. Because the computer needs these fonts, the Finder makes them invisible to prevent users from removing them.

What does the term *Apple classic fonts* mean?

The Apple classic fonts are the original ten bitmapped fonts that came with the first Macintosh in 1984. These fonts, which all have city names, include Athens, Cairo (a picture font), Chicago, Geneva, London, Los Angeles, Monaco, New York, San Francisco, and Venice. Several of the fonts (Athens, Cairo, London, and San Francisco) came in only one size—18 points.

This is a sample of Athens.



This is a sample of Chicago.

This is a sample of Geneva.

This is a sample of London.

This is a sample of Los Angeles.

This is a sample of Monaco.

This is a sample of New York.

This is a sample of San Francisco.

This is a sample of Venice.

Chicago, Geneva, Monaco, and New York are currently available in TrueType versions. The other classic fonts are still only available in bitmapped versions.

Why do I sometimes get Geneva or Courier in my printed documents when I have specified other fonts?

Geneva sometimes appears when you're trying to use a TrueType font but don't have enough memory for scaling to operate properly.

Substitute fonts can also appear in a document composed on one Macintosh that has a particular set of fonts but printed on another Macintosh that doesn't have those fonts.

Why does a document written entirely in Times look different on different Macintosh computers?

Times, an extremely popular font, is manufactured and sold by more than one company. Such fonts usually have small differences, even though they have the same name. For example, the Times font manufactured by Adobe Systems Incorporated has different letterspacing than does the Times font from Apple Computer, Inc.

What is font substitution?

Font Substitution, which isn't available for your Color StyleWriter 4500 printer, is an option in the Page Setup dialog box for certain PostScript printers. When font substitution is turned on, these printers will use their built-in equivalents for three bitmapped fonts (Times for New York, Helvetica for Geneva, and Courier for Monaco).

What's a downloadable font?

A downloadable font is a TrueType or PostScript font sent to some kinds of printers, such as most PostScript Laser printers, by your system software. The printer then uses the font to print your document.

If a printer has sufficient memory, it can hold more than one downloaded font; otherwise, it must request the fonts it needs as necessary. This can be a time-consuming process.

Some printers have hard disks attached to them for holding downloaded fonts. A printer can get the fonts from its hard disk more quickly than it can download them from the computer's hard disk.

Your Color StyleWriter 4500 printer cannot receive downloaded fonts. Instead, your computer composes the entire image and then sends it to your Color StyleWriter 4500 for printing.

Appendix C

Font List



Between the fonts that come with your Mac OS–based computer and those that come with the printer, there are 28 font families (and 64 total styled fonts) available as soon as you install the Color StyleWriter 4500 software.

Name in Font menu	Number of fonts	Font family (and styled fonts)	Comes with
Avant Garde	4	ITC Avant Garde® (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
Bookman	4	ITC Bookman® (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
Chicago	1	Chicago	Macintosh
Courier	4	Courier (plain, italic, bold, and bold-italic)	Macintosh
DELPHIAN	1	Delphian	Color StyleWriter 4500
Garamond Narrow	4	ITC Garamond® Narrow (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
Geneva	1	Geneva	Macintosh
Helvetica	4	Helvetica® (plain, italic, bold, and bold-italic)	Macintosh
Helvetica Black	2	Helvetica Black (plain and italic)	Color StyleWriter 4500
Helvetica Compressed	2	Helvetica Compressed (plain and italic)	Color StyleWriter 4500

continued ►

Name in Font menu	Number of fonts	Font family (and styled fonts)	Comes with
Lubalin Graph	4	ITC Lubalin Graph® (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
Lucida Bright	4	Lucida Bright (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
MACHINE	1	ITC Machine®	Color StyleWriter 4500
Monaco	1	Monaco	Macintosh
N Helvetica Narrow	4	Helvetica Narrow (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
<i>Nadianne</i>	2	Nadianne (plain and bold)	Color StyleWriter 4500
New Century Schoolbook	4	New Century Schoolbook (plain, italic, bold, and bold-italic)	Color StyleWriter 4500
New York	1	New York	Macintosh
Old English Text	1	Old English Text	Color StyleWriter 4500
Onyx	1	Onyx	Color StyleWriter 4500
<i>Oxford</i>	1	Oxford	Color StyleWriter 4500
Palatino	4	Palatino® (plain, italic, bold, and bold-italic)	Macintosh
<i>Swing</i>	1	Swing	Color StyleWriter 4500
Συμβολ (Symbol)	1	Symbol	Macintosh
Times	4	Times® (plain, italic, bold, and bold-italic)	Macintosh
<i>Zapf Chancery</i>	1	ITC Zapf Chancery® StyleWriter 4500	Color
☼☼☼☼ ☼☼☼☼ ☼☼☼☼ ☼☼☼☼ (Zapf Dingbats)	1	ITC Zapf Dingbats®	Color StyleWriter 4500
̄ ↓ ↑ ↘ (Zeal)	1	Zeal	Color StyleWriter 4500
Total	64		



Appendix D Using ColorSync



Mac OS–based computers use ColorSync to help make sure that the colors you see on your monitor closely match the colors you get on your printers, scanners, and other devices. Because ColorSync works behind the scenes, you don't have to know anything about it. All you need to do is initially set it up. This appendix describes how ColorSync works and how to configure your monitor and computer to take advantage of it.

The problem that ColorSync solves

Providing consistent color with desktop computers is a technical challenge because different color devices use different methods for representing color, and they produce different ranges of colors. For example, the colored light on your monitor is very different from the colored inks your printer uses.

Different color devices also create color using different methods. Monitors (and most scanners) produce colors by mixing red, green, and blue light—called *RGB color*. Most printers produce colors by mixing cyan (a shade of blue), magenta (a bright pink), yellow, and black ink. This color system is called *CMYK*. Since monitors, printers, and scanners each have different color capabilities, they cannot reproduce each other's colors exactly.

Further compounding the problem is that no two monitors or printers produce exactly the same colors. (For example, you can see differences in color ability among monitors in the TV department of a consumer electronics store.)

ColorSync is a system extension that provides color-conversion capabilities and improves color consistency. ColorSync “translates” the colors used on one device so that they more closely match the colors displayed or printed on another device.

ColorSync color conversion is a central part of Mac OS–based computing, ensuring that applications, monitors, printers, scanners, and digital cameras can use the same scheme for color conversion. This means you can scan an image, display it on your monitor, and print it—with visually matching colors every step of the way.


How ColorSync works

When you create a TIFF or PICT file using a program that supports ColorSync, a “profile” describing the color capabilities of your equipment is saved with the image. For example, when you scan a photograph, a profile describing the scanner is saved inside the image file. If you later print the image, even using a different computer, ColorSync looks at the profile to learn about the capabilities of the scanner you used, and automatically picks closely matching colors that your printer can reproduce.

The profile contains information ColorSync needs to perform color matching, such as the lightest and darkest possible tones (white point and black point) that the device can produce, and the maximum supported densities for red, green, blue, cyan, magenta, and yellow. Together, these characteristics describe the *color gamut* (or *range*) that a device is capable of capturing, displaying, or reproducing. To take advantage of ColorSync, each of the imaging devices you use needs to have its own ColorSync profile. When you create images using these devices, information from the profile will automatically become part of the image file—ensuring that colors are consistent throughout the entire creative process.

Because ColorSync information becomes part of your output files, you don't have to worry about losing the profile or using the wrong profile with the wrong image. Additionally, ColorSync profiles are in the standard International Color Consortium (ICC) format recognized by Microsoft Windows, Mac OS, and other systems.

When you work with an image that has an embedded ColorSync or ICC profile, ColorSync identifies the colors that your monitor or printer can reproduce by examining their ColorSync profile. It compares their capabilities with those of the system used to create the image (as described in the embedded profile), and then picks appropriate, matching colors. For example, your monitor may be able to display a vivid red, but your printer inks may not be able to produce that color. ColorSync determines the “next best” color for your printer to use.

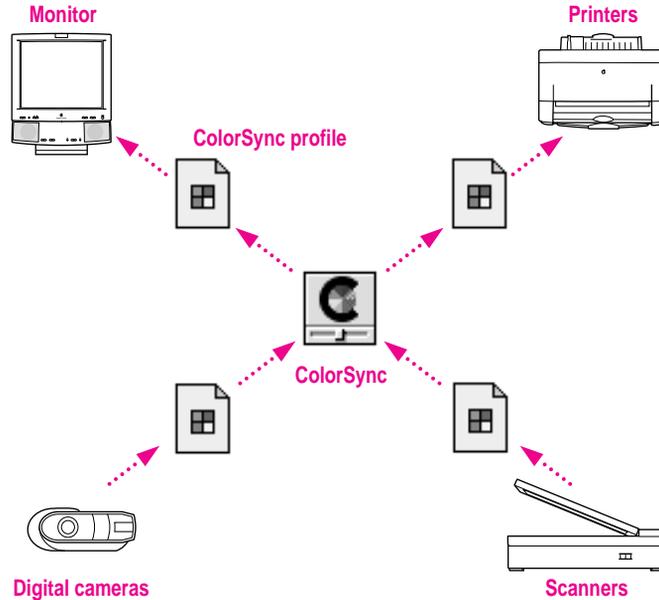

ColorSync performs color matching by comparing each profile to an independent color standard. ColorSync uses the CIE color standard, which describes colors in terms of how they are perceived by the human eye under specific lighting conditions. (CIE stands for the Commission International de l’Eclairage, the International Commission on Illumination, which created the standard in 1931.)

Setting up ColorSync

To take advantage of ColorSync, you need to obtain profiles for each of your imaging devices, such as your monitor, scanner, and color printer. ColorSync profiles are usually automatically installed when you install the software for a ColorSync-supported device. Profiles are stored in the ColorSync Profiles folder, inside the Preferences folder in the System Folder. If you need to obtain a ColorSync profile, contact the manufacturer of your device. Ask for either a ColorSync or ICC profile for the specific model of monitor, printer, or scanner you're using.

You also need to make sure the ColorSync extension and Apple CMM 2 are installed and active. ColorSync is automatically installed in the Extensions folder of your System Folder during software installation. Unless you've removed or disabled it, it's already installed.

Finally, you need to set a ColorSync System Profile for the Mac OS. The ColorSync System Profile is used by ColorSync to determine the color range of your monitor. ColorSync compares this information with the profiles of your other devices to make sure that colors are consistent with what you see on your monitor.

Additionally, the System Profile is used as a default profile if a document you are working on doesn't have any ColorSync information saved within it. This can occur if the document was created without ColorSync installed. By using the System Profile as a default, ColorSync ensures that colors are consistent with what you currently see on your monitor.

For the best color on your Color StyleWriter 4500 printer, you need to choose a specific profile for your monitor. In the ColorSync control panel, choose the D50 profile for your monitor. If there is no D50 available for your monitor, choose Apple Multiple Scan 17 – D50. The D50 profile gives you better “warm” colors.

For the best visual match between the colors on your monitor and printed colors, select the Page-White Gamma option in the Monitors control panel. (On some computers, this may be called the Monitors & Sound control panel.) To select a gamma option, open the Monitors control panel, then hold down the Option key while you click the Options button. In the Options window, click the Use Special Gamma checkbox to put a check in it. Then choose Page-White Gamma from the menu.

On a multiscan monitor, make sure that the color temperature, or intensity, is set to 9300 K (the default setting). See the monitor manual for instructions. If you select the Page-White Gamma option with a color temperature other than 9300 K, your monitor colors could look too red or too blue compared to printed colors.

Setting the ColorSync System Profile


To set the System Profile, follow these steps:

- 1 **Make sure the profile you want to use is located in the ColorSync Profiles folder.**

This folder is located in the Preferences folder in your System Folder.

- 2 **Choose Control Panels from the Apple () menu and open the ColorSync System Profile control panel.**


The ColorSync System Profile control panel appears.

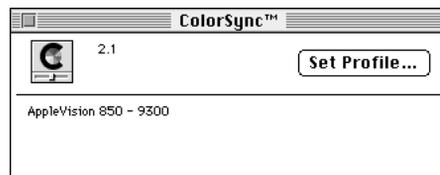

- 3 **Click Set Profile.**

A dialog box appears with a list of ColorSync profiles installed on your computer.

- 4 Click the profile you want to use.

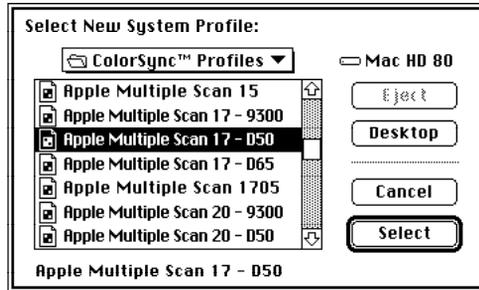

Select the D50 profile for your monitor, or Apple Multiple Scan 17 D50 if you can't find a D50 profile for your monitor.

- 5 Click Select.

ColorSync automatically references the profile you selected and uses it to define the color capabilities of your monitor.

- 6 Close the ColorSync System Profile control panel.

Setting other ColorSync profiles

Some programs and printer software might require that you do something special, such as turning on an option, in order to take advantage of ColorSync. For example, to use ColorSync with the Apple Color OneScanner, select the Use ColorSync option in the ColorSync Preferences dialog box of the OneScanner Dispatcher software. This tells the scanning software to embed information about the Color OneScanner in scanned images.

Refer to the instructions that came with your application or device to determine if it supports similar options. If there's an option to specify a profile or to activate ColorSync, be sure to use it.

Tips for best results

After you've made sure ColorSync is installed, set the System Profile, and set any necessary ColorSync options for your applications, you're ready to begin taking advantage of ColorSync! Just scan, create, and print your images or documents as you normally would. ColorSync works behind the scenes to ensure consistent color matching.

The following settings and strategies will help you get the best color results from your system. Not all of these tips will apply to the software and devices you may be using, but be sure to take advantage of those tips that do.

- Set the gamma curve for your monitor to 1.8:Standard to have the monitor more closely match printed results..
- Use the ColorSync System Profile control panel in the Apple () menu to select the D50 profile for your monitor, or Apple Multiple Scan 17–D50 if you can't find a D50 profile for your monitor. If you calibrate your monitor, you can create a custom profile and select it as the system profile instead. See the documentation that came with your monitor for more information on creating custom ColorSync profiles.
- When printing in color, be sure to select the ColorSync option. In the Page Setup dialog box, click the Options button and select “ColorSync” from the Color Matching pop-up menu.
- If your scanning program has a ColorSync option, use it. This embeds a ColorSync profile within the scanned image file, and ColorSync will be better able to reproduce the original colors on your monitor and printer.
- Don't try to use two color-matching systems at once on your computer. Some applications install other color-matching systems. These should either be removed or disabled if you want to use ColorSync.

For more information

To learn more about ColorSync, or color matching and color technology in general, refer to these publications and resources.

Publications

Advanced Color Imaging on the Mac OS, Apple Computer, Inc., Addison-Wesley Developers Press, ISBN 0-201-48949-X

ColorSync 2.0 White Paper at <gopher://info.apple.com>

Internet Resources

Apple Imaging Web Site at <http://imaging.apple.com>

Apple Technical Information Library at <http://til.info.apple.com>

International Color Consortium at <http://www.color.org>

ColorSync plug ins for use with Adobe Photoshop (Macintosh Utilities section of the Apple Software Updates page on the Apple Support and Information Web at <http://www.info.apple.com>)



Can't Find It? See also Macintosh Guide's onscreen index. Open the Guide (Ⓜ) menu and choose Macintosh Guide (or Mac OS Guide); then click the Index button.



Index

A

- AC power adapter, power requirements 88
- Acrobat Reader Help 26
- address, return 42
- Adobe Acrobat Reader Online Guide 26
- Adobe PostScript font support 86
- aligning ink cartridges 21–22
- Apple-authorized service providers 67
 - dealer phone number 89
- Apple classic fonts 103
- Apple Color Ink-Jet printing materials
 - Banner Paper 38, 61
 - Color PhotoGrade Paper 34, 60, 62
 - Glossy Paper 60
 - Premium Coated Paper 60
 - recommended 86
 - Transparency Film 61
- Apple Printer Software Collection
 - CD-ROM 12
- Apple printer supplies and accessories 89
- Apple QuickDraw GX software, incompatibility 12
- applications, virus-detection 13, 15
- Auto color setting 33

B

- background printing
 - controlling and monitoring 32
 - delays 34
 - turning on and off 31
- backwards printing 79
- banner paper
 - printing with 38–41, 61
 - special instructions 62
- birthday greetings, printing 61
- bitmapped fonts 93–94
 - icon 93
 - using with TrueType fonts 96–97
- black ink cartridge
 - installing 9–11
 - removing 35
 - testing 22
- blinking lights, indicating problems 72–73
- bold fonts 101–102
- business-size envelopes, printing 42–46
- buttons, on printer 8



Can't Find It?

See also Macintosh

Guide's onscreen index.

Open the Guide (🔍)

menu and choose

Macintosh Guide

(or Mac OS Guide);

then click the

Index button.

C

- cables
 - connecting printer to computer 6
 - part numbers 89
 - shielded vi
- canceling printing 32
- cards
 - loading 61
 - printing 51–53
- carrier, for ink cartridges 9–11
- carton, unpacking 3–4
- cartridges. *See* ink cartridges
- CD-ROM, installing printer software
 - from 12–15
- Chooser (Apple menu)
 - Color SW 4000 Series icon in 68
 - selecting printer in 16
- choosing printing materials 59–62
- CIE color standard 109
- cleaning the printer 2, 66
- CMYK color system 107
- coated paper 60
 - special instructions 62
- color images, printing in grayscale 30
- color ink cartridge, installing 10–11, 21–22
- Color Options dialog box 63
- color PhotoGrade Ink cartridge. *See* PhotoGrade Ink cartridge
- Color PhotoGrade paper, special instructions 62
- colors
 - adjusting 33
 - best 63
 - CMYK system 107–108
 - consistency 107–114
 - faded 80
 - missing or faded 65
 - RGB 107
 - untrue 81
- Color StyleWriter 4000 Series Minimal Printer Software floppy disk, installing from 12
- Color StyleWriter 4500 printer. *See also* printer
 - main features ix
 - unpacking 3–4
- ColorSync
 - color-matching system 33, 107–108
 - explanation 108–109
 - profiles of imaging devices 110–112
 - publications and Internet
 - resources 114
 - tips for using 113
- commands
 - CSW Guide (Guide [?] menu) 24–25
 - Page Setup (File menu) 21, 37
 - Print (File menu) 28, 30
 - PrintMonitor (Application menu) 32, 54
- computer
 - crashing 70
 - failing to recognize printer 70–71
 - font search order 98
 - monitoring background printing 32
 - selecting Color StyleWriter 16–17
- computer paper, continuous 38–40, 62
- connecting printer to computer 6
- connector cable 86
 - part numbers 89
- continuous computer paper
 - for printing banners 38–40
 - special instructions 62
- copier paper, weight 59
- copies, print settings for 30
- copying software 15
- corrupted fonts, removing 69
- costs, printing materials 64
- cover
 - closing 11
 - opening 9
 - safety instructions 1
- crashing computer 70
- CSW 4000 Series icon, in Chooser 16
- CSW 4000 Series Printer Guide
 - help for color options 33
 - opening 24
 - tips for using 25

- CSW Guide command (Guide [?] menu) 24
- Custom Install 15

D

- damage
 - power cord 2
 - preventing 9, 68
- defining terms 25
- demi font 102
- disconnecting power 5
- disk duplication 12
- documents
 - horizontally flipped 56
 - non-standard 29–30
 - page settings 29
 - planning 27
 - print settings 30
 - problems printing pages 75
 - standard 28
 - unexpected results 77–82
 - waiting to print 32
- double-sided printing 54–55
- downloading fonts 104
- draft printing 30
- duplex printing (two-sided) 54–55

E

- electrical hazards 2
- electricity, frequencies 5
- electromagnetic interference 4
- electronic user's setup manual 26
- engine speed 85
- envelopes
 - feeding improperly 74
 - loading 19–20
 - non-standard 58
 - positioning 43
 - printing single 42–43
 - printing stack 44–46
 - size settings 29

- error messages
 - background printing 31
 - installation 13
 - wrong port 76
- expenses, reducing 64
- external paper selector, adjusting 29
- External serial port setting 18
- extra font 102

F

- faded colors and lines 80
- film, transparency 47–48, 61
- flashing lights 9
- Flip Horizontal, page setup for 56
- floppy disks
 - creating from disk images 12
 - for installing printer software 12
- font families, in suitcases 100–101
- font list 105–106
- Font menu names 105–106
- fonts
 - Apple classic 103
 - bitmapped 93–94
 - corrupted 15, 68–69
 - downloading 104
 - families in suitcases 100–101
 - installing 12
 - list 105–106
 - missing 103
 - mixing 96–97
 - names 97
 - order in System Folder 99
 - PostScript 94–95
 - problems 77
 - purchasing 102
 - search order on computers 98
 - styled 101–102
 - substitution 103–104
 - supported 86
 - Times variations 104
 - TrueType 92–93
- frequencies, electric 5
- front cover
 - closing 11
 - opening 9



Can't Find It?

See also Macintosh

Guide's onscreen index.

Open the Guide (🔗)

menu and choose

Macintosh Guide

(or Mac OS Guide);

then click the

Index button.

G

- glossy paper 60
 - special instructions 62
- graphic images, jagged 78
- Guide window, moving 25

H

- hard disk, space requirements x
- hardware
 - correct 15
 - requirements x
- help
 - Adobe Acrobat Reader Online Guide 26
 - CSW 4000 Series Printer Guide (Finder) 24–25
 - electronic user's setup manual 36
 - Macintosh Guide (Finder) 24
- horizontal lines, print quality problems 81
- “Huh” button 25

I, J, K

- icons
 - bitmapped fonts 93
 - CSW 4000 Series in Chooser 16, 68
 - modem and printer port 6
 - PostScript 94–95
 - TrueType 92
- images
 - colored 30
 - fuzzy 80
 - jagged 78
 - wavy or distorted 82
- image size, page setup for 29
- index cards
 - loading 61–62
 - printing 51–53

- information
 - in CSW 4000 Series Printer Guide 25
 - technical 85–89
- ink
 - preventing stains 11
 - smearing 80
- ink cartridges
 - aligning 21–22
 - cleaning 82
 - conserving ink 64
 - drying out 8
 - extending life 83
 - inserting PhotoGrade cartridge 36
 - installing 9–11
 - page setup for PhotoGrade cartridge 29, 37
 - part numbers 89
 - preventing damage 9
 - removing black ink cartridge 35
 - replacing 65
 - safety instructions 1, 68
 - sliding carrier 9
 - storing 4, 11, 35
 - tape on print head 10
 - unpacking 3
- Ink-Jet printing materials 60–61
- installation
 - ink cartridges 9–11
 - printer software 12–15
 - troubleshooting 15, 68–69
- Installer program, installing printer software 12–15
- instructions, onscreen 25
- interface
 - port 6
 - specifications 86
- interference
 - radio and television vi
 - from transmissions 4
- internal modem, special setup for 18
- Internet resources, for ColorSync 114
- italic fonts 101–102

L

- labels
 - loading 61
 - printing 49–50
 - special instructions 62
- landscape page orientation 29
- length adjuster 19, 46
- light font 102
- lights
 - indicating problems 72–73
 - resume 9
- lines
 - fading 80
 - unwanted horizontal 81
- loading printing materials
 - banner paper 39
 - coated paper 60
 - for color printing 60
 - continuous paper 61
 - custom size 57–58
 - envelopes 42–46
 - feeding improperly 74
 - glossy paper 60
 - index cards 51–53
 - labels 49–50
 - PhotoGrade paper 34
 - photo-quality paper 60
 - plain paper 59
 - postcards 51–53
 - in sheet feeder 19–20
 - special instructions 62
 - transparencies 48
 - for two-sided printing 55
- LocalTalk network
 - connector kits 7, 89
 - selecting in Chooser 17
- lower tray. *See also* paper trays
 - capacities 86
 - loading custom-size paper 57
 - loading printing materials 62
 - stacking cards 52

M

- Macintosh computers, serial port 6
- Macintosh Operating System (Mac OS)
 - available fonts 105–106
 - version 7.1 requirements x
- Macintosh PowerBook owners
 - printing problems 8, 71
 - special setup information 18
- Mac OS–based computers
 - available fonts 105–106
 - help 24
 - system requirements for printer x
- maintaining the printer 65–66
- manual duplex printing (two-sided)
 - 54–55
 - page setup for 29
- marking engine 85
- matching colors 63
- media. *See* paper types
- memory
 - not enough 13
 - problems 76–77
 - RAM requirements x
 - virtual 8
- messages
 - background printing 31
 - installation 13
 - wrong port 76
- modems
 - port 6
 - selecting in Chooser 16
 - setup for internal 18
- monitors, matching colors 33, 63,
107–109
- moving the ink cartridge carrier 9
- multiscan monitor, matching colors
33, 63, 111



Can't Find It?

See also Macintosh

Guide's onscreen index.

Open the Guide (🔍)

menu and choose

Macintosh Guide

(or Mac OS Guide);

then click the

Index button.

N

- network
 - changing printer name 17
 - connecting printer to LocalTalk 7
 - printing problems 71
- Normal serial port setting 18

O

- oblique font 102
- onscreen help 24–25
- operating environment 88
- options, color 33
- orientation, page setup for 28–29
- output tray, capacity 86

P

- packing materials 3–4
- page breaks, unexpected 78
- page orientation, page setup for 28–29
- pages
 - failing to print 75
 - off-center printing 78
 - printable area 87
 - printing both sides 29
 - range of printing 30
 - sample 23
 - stained 82
- page setup
 - banners 38
 - business-size envelopes 42
 - custom-size paper 58
 - dialog box 29
 - flipped documents 56
 - index cards 51
 - labels 49
 - photographs 37
 - postcards 51
 - stacked envelopes 44
 - transparencies 47
 - two-sided printing 54

- Page Setup command (File menu) 21, 37
- Page-White Gamma option (Monitors control panel), for matching colors 63, 111

paper

- advancing 41
- choosing 59–62
- cost 64
- defining custom size 57–58
- jam 73
- partially printed 80
- quality 63
- sizes 29, 87
- speed of printing 64
- paper adjusters 19–29
 - for custom-size paper 58
 - for printing envelope stack 44–46
 - for stacking cards 52–53
- paper-backed transparencies 48, 62
- paper selection lever 19, 23
- paper selector, adjusting 29
- paper trays
 - for custom size paper 57
 - for envelopes 43–46
 - for labels 50
 - for photographic paper 34
 - stacking cards in 51–53
 - for standard paper 19–20
 - for transparencies 48
 - for two-sided printing 54–55
- paper types
 - banner 38
 - choosing and using 59–62
 - custom size 57–58
 - improper choices 79
 - index cards 51
 - labels 49
 - loading standard 19–20
 - photographic 34
 - plain 59
 - postcards 51
 - printing both sides 54–55
 - standard size in United States 28

- part numbers, product 89
- PhotoGrade ink cartridge
 - inserting 36
 - page setup for 37
 - printing with 34–36
 - removing and storing 37
 - turning off background printing 31
 - uses 10
- photographs, printing 34–37
- photo-quality paper 60
- pictures, reversing 56
- plain paper
 - page setup 37
 - special instructions 62
 - tips 59
- planning documents 27
- platen, cleaning 82
- plugging in the printer 1
- portrait page orientation, in standard document 28–29
- ports
 - connecting printer and computer 6
 - selecting 70
 - serial in PowerBook 18
- postcards
 - loading 62
 - printing 51–53
- PostScript fonts 94–95
 - compatibility with TrueType fonts 97
 - icons 94–95
- power, disconnecting 5
- power adapter
 - plugging in 5
 - requirements 88
 - unplugging in an emergency 2, 5
- PowerBook computer owners
 - printing problems 71
 - setup information 18
- power button 8
- power consumption 88
- power cord
 - damaged 2
 - unplugging the power adapter 5
- power light 8, 72–73
- Power Macintosh users, printing problems 8
- precautions, safety 1–2, 68
- premium paper 60
- previewing printed page 30
- Print command (File menu) 28, 30
- printed page
 - aligning black and magenta lines 22
 - previewing 30
- printer
 - Apple supplies and accessories 89
 - cleaning 2, 66
 - connecting to computer 6
 - connecting to LocalTalk network 7
 - cover 1, 9
 - dimensions 87
 - failure 70
 - locating in work area 4
 - network name 17
 - plugging in 5
 - ports 6
 - preventing damage 9, 68
 - resetting 37, 71
 - sharing 7
 - slow 73
 - weight 87
- printer port, selecting in Chooser 16
- printer software
 - installing 12–15
 - space required x
- print head
 - cleaning 82
 - drying out 11
 - preventing damage 9
 - removing tape 10
- printing
 - background 31–32
 - banners 38–41
 - canceling 32
 - color options 33
 - continuous document 61
 - custom-size paper 57–58



Can't Find It?

See also Macintosh

Guide's onscreen index.

Open the Guide (🔍)

menu and choose

Macintosh Guide

(or Mac OS Guide);

then click the

Index button.

double-sided printing 54–55
duplex printing (two-sided) 54–55
envelopes 42–46
failure 70–71
flipped document 56
index cards 51–53
instructions 28–30
labels 49–50
manual duplex (two-sided) 54–55
monitoring activity 32, 70
page setup for 29
partial 80
patterns to align ink cartridges 22
photographs 34–37
planning 27
poor quality 79–83
postcards 51–53
previewing 30
problems 75
range of pages 30
resetting for normal 41
return address 42
sample pages 23
transparencies 47–48
two-sided 54–55
printing materials
 Apple 89
 choosing 59–62
 cost 64
 feeding improperly 74
 quality 63
 specifications 86
 speed of printing 64
PrintMonitor command (Application
 menu), checking and controlling
 print requests 32, 54
print requests, monitoring activity 32, 70
print settings 30

Q

quality paper 60, 79
quality printing, setup for 30, 63

QuickDraw GX software,
 incompatibility 12

R

radio interference vi
RAM (random-access memory),
 requirements x
range of pages, printing 30
reception, radio and television vi
resolution 85
resume button 8
resume light 8–9, 11, 21, 72–73
return address 42
RGB color 107
rollers, cleaning 82
roman font 102

S

safety instructions 1–2, 68
sample pages, printing 23
scalable fonts 92–93
scaling, page setup 29
serial cable 6
serial ports, PowerBook 18
service provider 67
setting up
 aligning ink cartridges 21–22
 connecting printer to computer 6
 directly connected printer 16
 ink cartridges 9–11
 learning about onscreen help 24–25
 loading paper 19–20
 on LocalTalk network 17
 PowerBook owners 18
 printer software 12–15
 printing sample pages 23
 safety instructions 1–2
 turning printer on and off 8
 unpacking the printer 3–4
 using electronic user's manual 26
setup, page. *See* page setup

- sheet feeder. *See* paper trays
- single-envelope slot 42
- size, paper 29
- software
 - installing for printer 12–15
 - space requirements x
- software license agreement 13
- specifications 85–87
- speed of printing 64
- stains, ink 11, 82
- standard documents 28
- storage environment 88
- storing ink cartridges 11, 35
- substitution, font 104
- suitcases, font 100–101
- support provider 67
- System Folder, font order in 99
- system requirements x
- system software
 - upgrading 12
 - verifying 13

T

- technical information 85–89
- television interference vi
- text, reversing 56
- tips, for choosing printing materials 59–62
- top tray. *See* upper tray
- transparencies
 - feeding improperly 74
 - loading 61
 - printing 47–48
 - special instructions 62
- troubleshooting
 - backwards printing 79
 - blinking lights 72–73
 - Color SW 4000 Series icon 68
 - computer failure 70
 - corrupted fonts 69
 - font problems 77
 - installation 68–69
 - jagged graphic images 78
 - memory problems 76–77
 - messages 76
 - off-center printing 78

- page breaks 78
- paper jams 74
- PowerBook printing 71
- print quality 79–83
- slow printing 73
- unaligned columns 79
- using safety precautions 68
- TrueType fonts 92–93
 - icon 92
 - specifications 86
 - using with bitmapped fonts 96–97
- turning off the printer 8
- turning on the printer 8
- two-sided printing 54–55
 - page setup 29
- typing paper 59

U

- unpacking the printer 3–4
- unplugging the printer 1–2
- upper tray. *See also* paper trays
 - removing 51
 - replacing 53
- user's manual, electronic 26
- US letter-size paper 19, 28

V

- ventilation in work area 4
- virtual memory, turning on 8
- virus-detection software, turning off 13, 15, 68
- voltage requirements 5

W, X, Y

- warranty 67
- whole document, printing 30
- work area, locating printer 4

Z

- Z-fold paper
 - loading 39–40
 - special instructions 62

The Apple Publishing System

This Apple manual was written, edited, and produced on a desktop publishing system using Apple Macintosh computers and QuarkXPress. Technical illustrations were drawn in Adobe™ Illustrator; screen shots were created and modified with system software, ExposurePro, and Adobe Photoshop. Final pages were output using PostScript™ technology.

Text type is Times®, display type is Helvetica® Narrow, and cover type is Apple Garamond, Apple's corporate font. Ornaments are custom symbols designed for Apple Computer. Some elements, such as computer voice, are set in Courier, a fixed-width font.

PostScript, the LaserWriter page-description language, was developed by Adobe Systems Incorporated.